


AVR 635 FRONT-PANEL CONTROLS

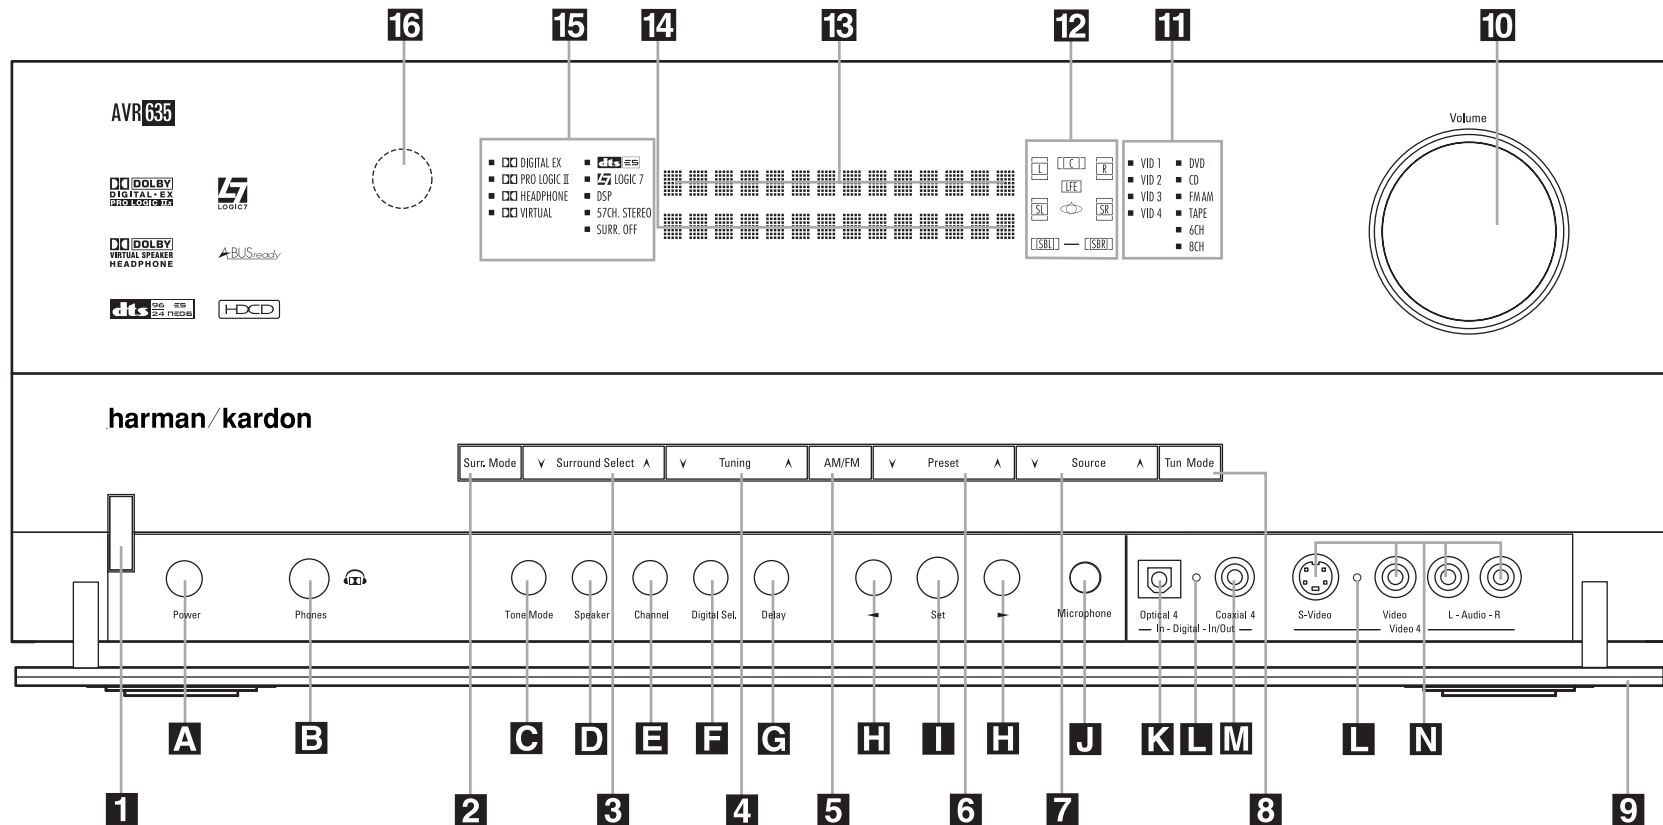

The following controls and indicators are available on the AVR 635's front panel:

- 1** Standby/On Switch
- 2** Surround Mode Group Selector
- 3** Surround Mode Selector
- 4** Tuning Selector
- 5** Tuner Band Selector
- 6** Preset Station Selector
- 7** Input Source Selector
- 8** Tuning Mode Selector
- 9** Front-Panel Control Door
- 10** Volume Control
- 11** Input Indicators
- 12** Speaker/Channel Input Indicators
- 13** Upper Display Line
- 14** Lower Display Line
- 15** Surround Mode Indicators
- 16** Remote Sensor Window

The following controls and jacks are located behind the front-panel door. To open the door, place the edge of a finger on the left or right edge of the panel and gently swing the door down toward you.

- A** Main Power Switch
- B** Headphone Jack
- C** Tone Mode Button
- D** Speaker Selector Button
- E** Channel Adjust Selector
- F** Digital Input Selector
- G** Delay Adjust Selector
- H** ◀▶ Buttons
- I** Set Button
- J** EzSet/EQ Microphone Jack
- K** Optical 4 Digital Input
- L** Input/Output Status Indicators
- M** Coaxial 4 Digital Jack
- N** Video 4 Audio/Video Jacks