

MC-1 Digital Controller Quick Reference Guide




Finding your way through the Menus

On the remote control, press SELECT. Use ▲ or ▼ to highlight an item. Press SELECT to open a submenu.


Continue highlighting and SELECTing to reach the parameter you want to change.

Adjust parameters with ▲ or ▼. Your changes are saved automatically.

Press DONE to step back and exit each display.

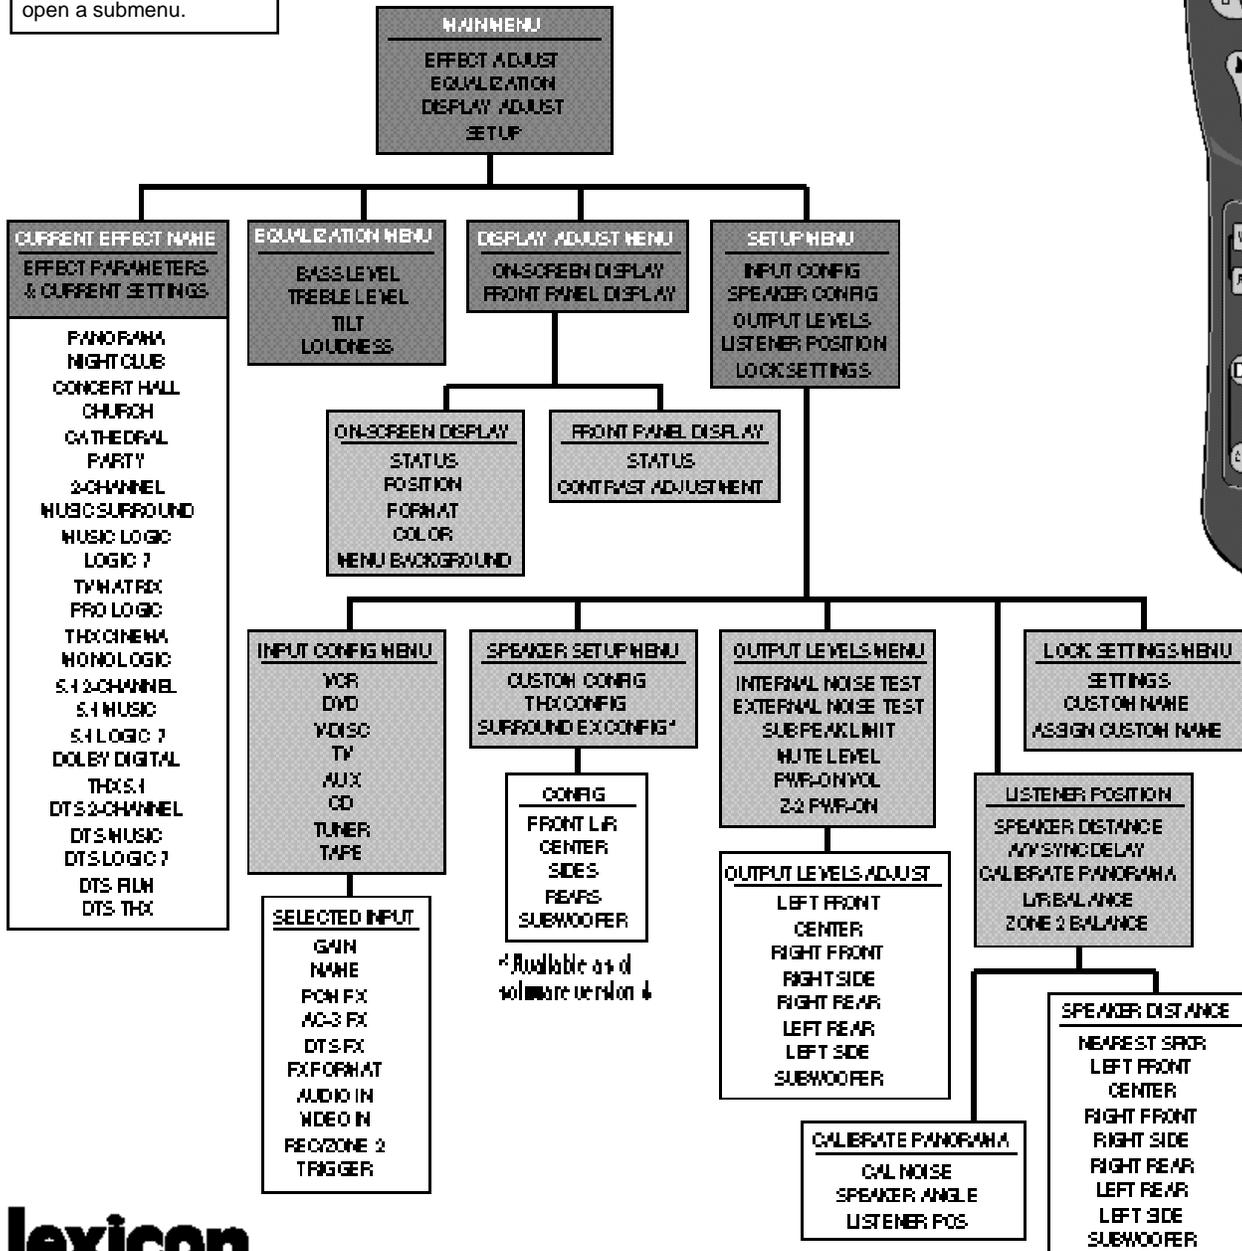

MC-1 Digital Controller Quick Reference Guide

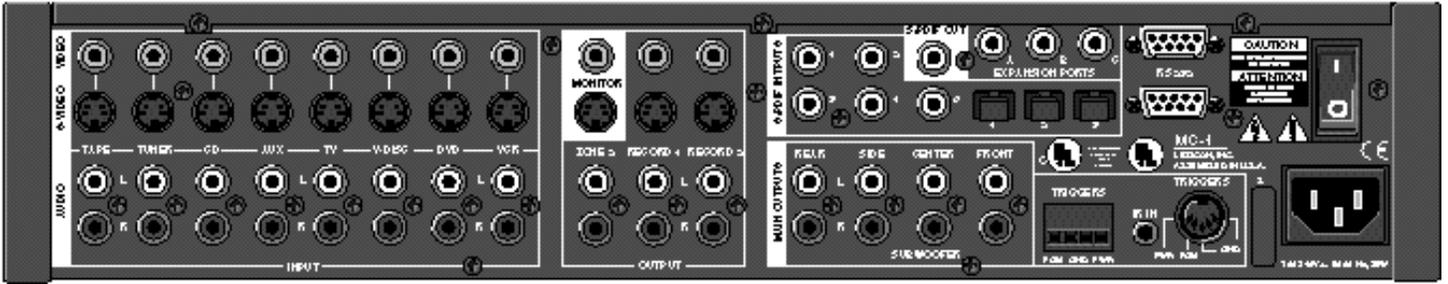


Alternate Remote Control Functions



Record/Zone 2 Control

Zone 2 controls can be accessed from either the MC-1 front panel, or the remote control by pressing and holding down the Record/Zone 2 button in conjunction with the buttons shown below.

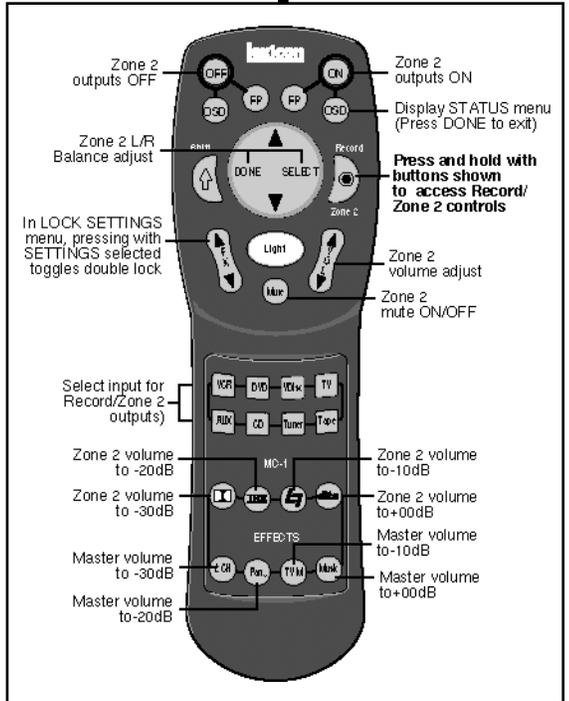

Restoring Factory Defaults

Make a note of any programs, setup or calibration values you want to re-enter, as this procedure will reset all MC-1 parameters to their default states, as well as all setup and calibration values.

Using the remote, turn the unit OFF, then ON, then press and hold MUTE. The on-screen display will read:

```

FACTORY PRESETS MENU
EXIT
RESTORE DEFAULTS
    
```

To resume normal operation *without* restoring all defaults, press SELECT. To clear and reload all preset effects and all factory settings, use ▼ to highlight RESTORE DEFAULTS, and press SELECT.

When the message:

```

FACTORY PRESETS MENU
FACTORY DEFAULTS
RESTORED
    
```

is displayed, press DONE to return to normal operation.

