


# AVR 745 FRONT-PANEL CONTROLS

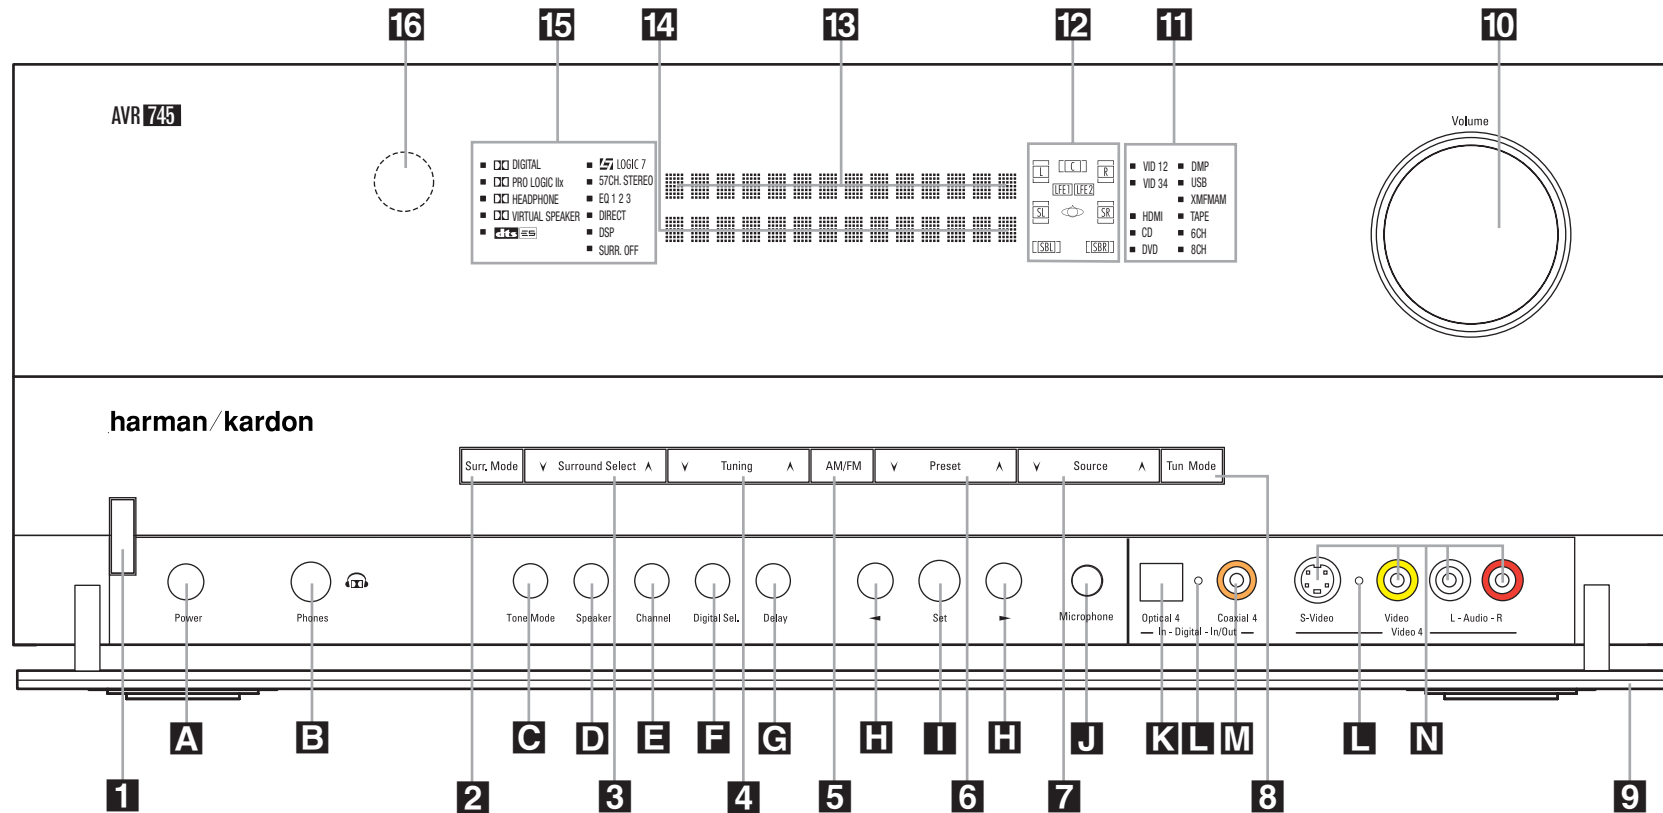

The following controls and indicators are available on the AVR 745's front panel:

- |                                       |                                  |  |                                    |
|---------------------------------------|----------------------------------|--|------------------------------------|
| <b>1</b> Standby/On Switch            | <b>5</b> Tuner Band Selector     | <b>9</b> Front-Panel Door                  | <b>13</b> Upper Display Line       |
| <b>2</b> Surround Mode Group Selector | <b>6</b> Preset Station Selector | <b>10</b> Volume Control                   | <b>14</b> Lower Display Line       |
| <b>3</b> Surround Mode Selector       | <b>7</b> Input Source Selector   | <b>11</b> Input Indicators                 | <b>15</b> Surround Mode Indicators |
| <b>4</b> Tuning Selector              | <b>8</b> Tuning Mode Selector    | <b>12</b> Speaker/Channel Input Indicators | <b>16</b> Remote Sensor Window     |

The following controls and jacks are located behind the front-panel door. To open the door, place the edge of a finger on the left or right edge of the panel and gently swing the door down toward you.

- |                                  |                                  |   |                                     |
|----------------------------------|----------------------------------|---|-------------------------------------|
| <b>A</b> Main Power Switch       | <b>E</b> Channel Adjust Selector | <b>I</b> Set Button                     | <b>M</b> Coaxial 4 Digital Jack     |
| <b>B</b> Headphone Jack          | <b>F</b> Digital Input Selector  | <b>J</b> EzSet/EQII Microphone Jack     | <b>N</b> Video 4 Input/Output Jacks |
| <b>C</b> Tone Mode Button        | <b>G</b> Delay Adjust Selector   | <b>K</b> Optical 4 Digital Input        |                                     |
| <b>D</b> Speaker Selector Button | <b>H</b> ◀▶ Buttons              | <b>L</b> Input/Output Status Indicators |                                     |