 
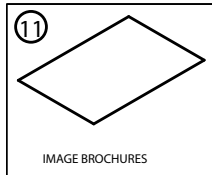 
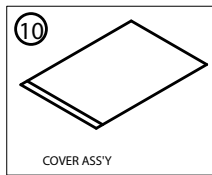 
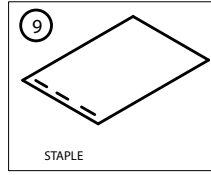 
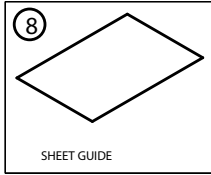 
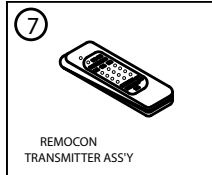 
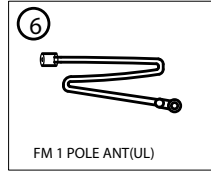 
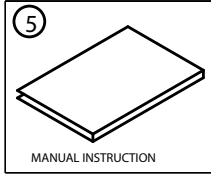 
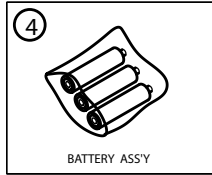 
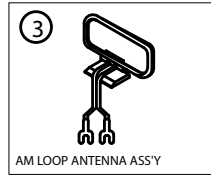 
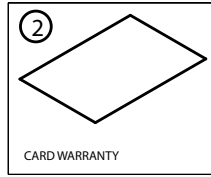 



1. Instruction manual ass'y - Accessories

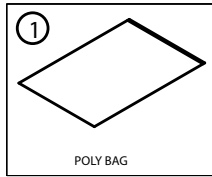

NO	DESCRIPTION	PARTS NO.	Q.ty
1	POLY BAG		1
2	CARD WARRANTY	CQE1A172X	1
3	AM LOOP ANTENNA	CSA1A027Z	1
4	BATTERY		3
5	INSTRUCTION MANUAL	SEE HK WEBSITE FOR PDF COPY	1
6	FM 1 POL ANT(UL)	CSA1A019Z	1
7	REMOCON TRANSMITTER ASS'Y	CARTAVR147	1
8	SHEET GUIDE(QUICK START GUIDE)	CQE1A329Y	1
9	STAPLE		3
10	DOOR KIT ASS'Y	CGRAVR130ZA	1
1	COVER A	CGR1A331M7H43	1
2	COVER B	CGR1A332M7H43	1
3	SHEET,FRONT COVER	CQE1A219Z	1
4	PAD,COVER	CPS1A676	1
5	BAG,POLY		1
11	IMAGE BROCHURES		1

2. Package Drawing

 AVR147

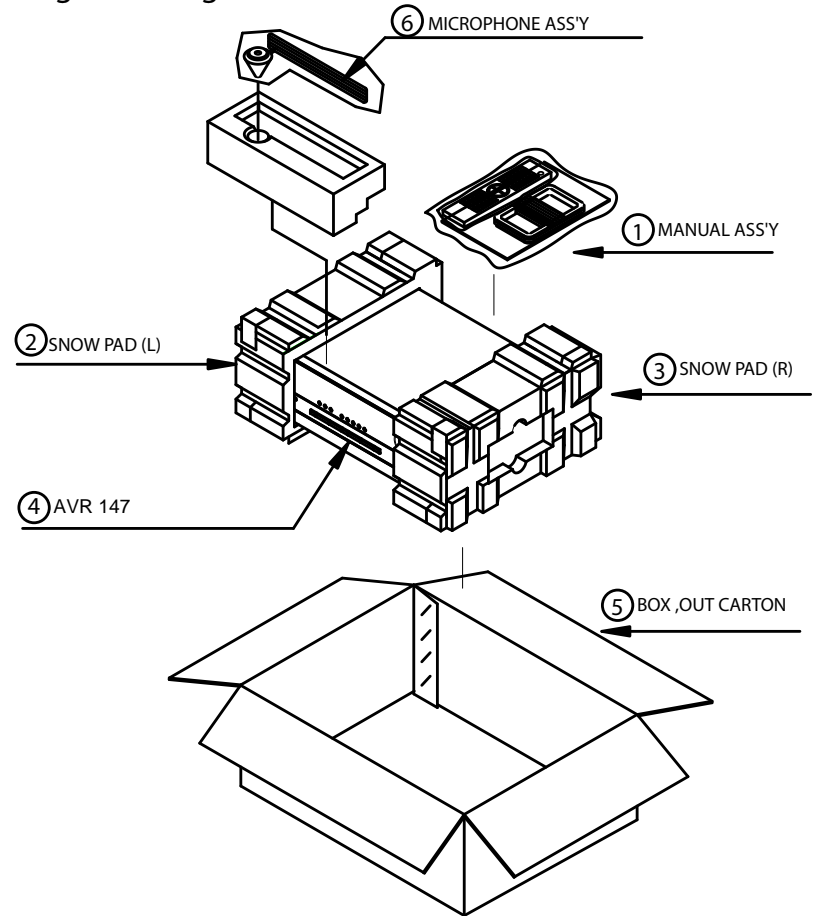

NO	DESCRIPTION	PARTS NO.	Q.ty
1	MANUAL ASS'Y		1
2	SNOW,PAD(L)	CPS4A564	1
3	SNOW,PAD(R)	CPS4A565	1
4	AVR 147	AVR 147	1
5	BOX,OUT CARTON	CPG1A822Y	1
6	MICROPHONE ASS'Y	CJXAVR340MICRO	1