


# AVR 7200 ZONE II REMOTE CONTROL FUNCTIONS

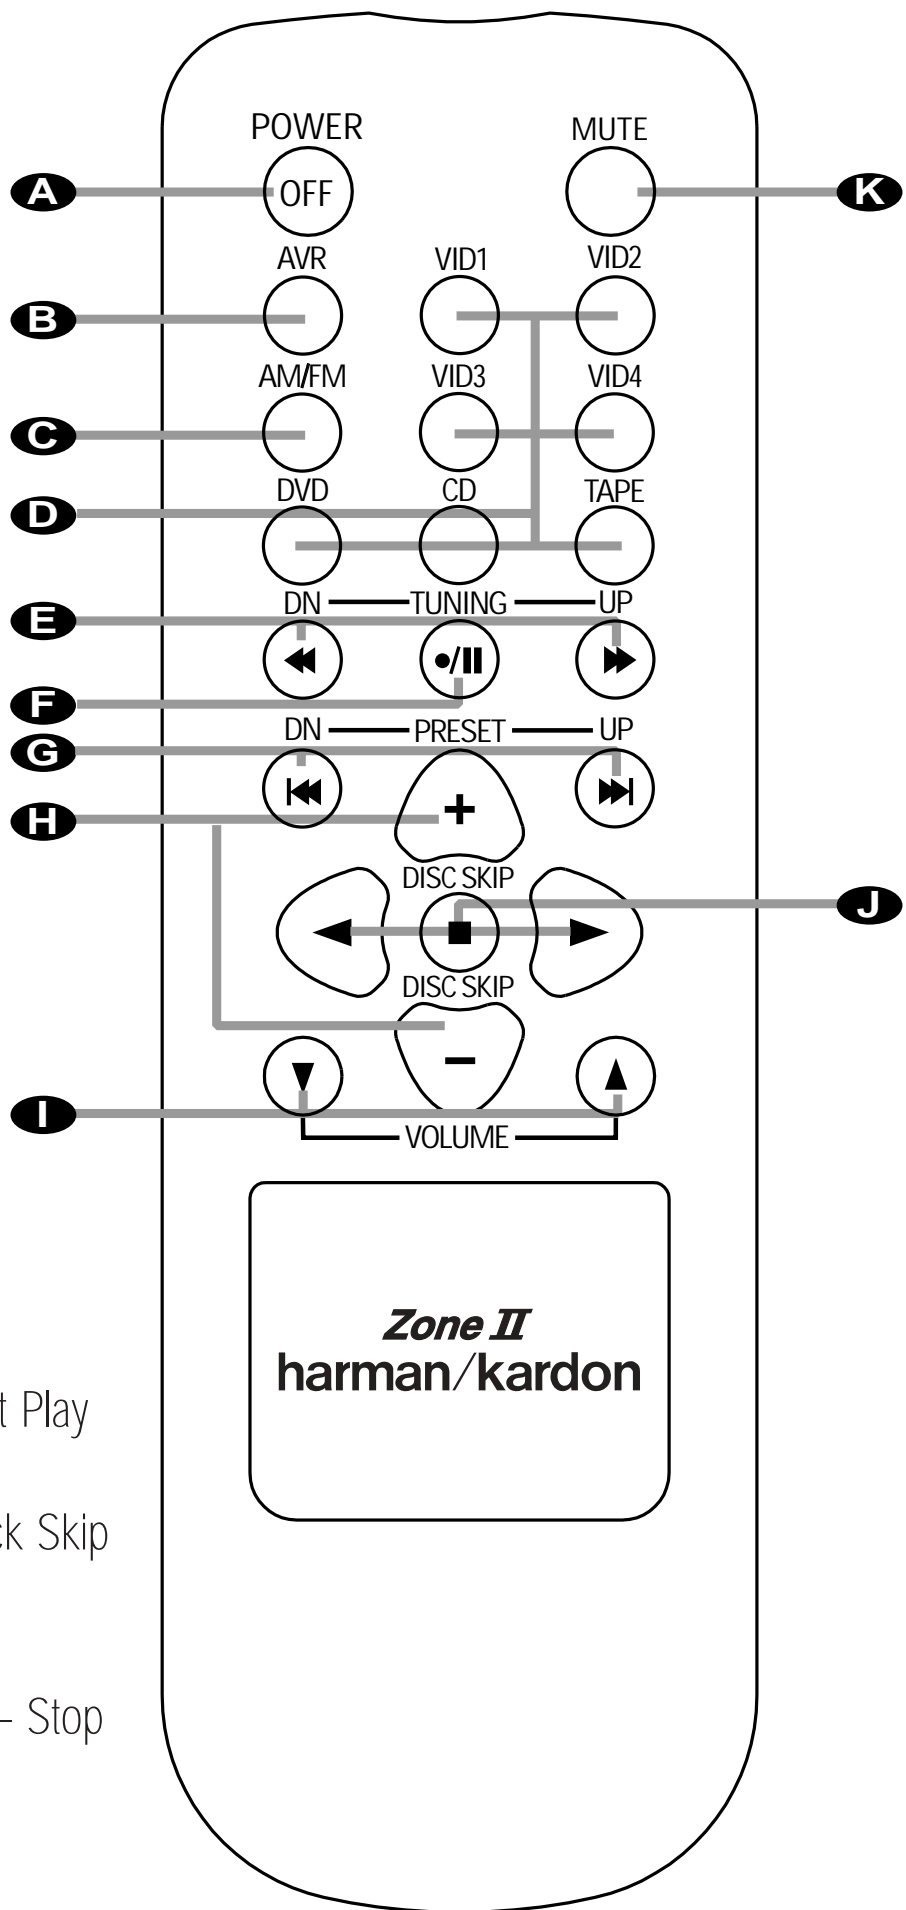

- A** Power Off
- B** AVR Selector
- C** AM/FM Tuner Select
- D** Input Selectors
- E** Tuning Up/Down – Fast Play
- F** Record/Pause
- G** Preset Up/Down – Track Skip
- H** Disc Skip
- I** Volume Up/Down
- J** Play Forward/Reverse – Stop
- K** Mute

**Zone II**  
harman/kardon