 


## QUICK START GUIDE WARRANTY CARD / WARNING

## HARMAN's FAMILY OF LEGENDARY BRANDS



 
## QUICK START GUIDE



After plug-in the earphone:  
 • Press the "O" button once to pause /play the music;  
 • When a new call rings ,press the "O" button to switch to talk mode;  
 • Press the "O" button continuously 2 times to move to the next track;  
 • Press the "O" button continuously 3 times to play the previous track;  
 (Note: The instructions may vary in operations according to different cell phone the headset connected with)

## WARNING!

- To guarantee your personal safety, please ensure that these headphones are not worn or kept in the immediate vicinity (closer than 10 cm) of a pacemaker.
- Do not insert jack plug into electric sockets.
- Supervise children when using the equipment. The product is not a toy.



### IMPORTANT!

The operation of switches on your hi-fi system or plugging in the head-phones may cause clicks which at high volume settings may affect your hearing. Therefore, always set the volume control to minimum before switching between different sources(tuner, turntable, CD player, etc.) or plugging in the headphones. For traffic safety, do not use headphones while driving or cycling. The ear sleeves may deteriorate due to long-term storage or use.



 
### INFORMATION ON DISPOSAL FOR USERS OF WASTE ELECTRICAL & ELECTRONIC EQUIPMENT (PRIVATE HOUSHOLD)

This symbol on the products and/or accompanying documents means that used electrical and electronic products should not be mixed with general household waste. For proper treatment, recovery and recycling, please take these products to designated collection points, where they will be accepted on a free of charge basis. Alternatively, in some countries you may be able to return your products to your local retailer upon the purchase of an equivalent new product. Disposing of this product correctly will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point. Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

### INFORMATION ON DISPOSAL IN OTHER COUNTRIES OUTSIDE THE EUROPEAN UNION

This symbol is only valid in the European Union. If you wish to discard this product, please contact your local authorities or dealer and ask for the correct method of disposal.

## 快速入門指南



插入耳機後:  
 • 按一次"O"鍵暫停/播放音樂;  
 • 當有新的來電時,按下"O"鍵切換到通話模式;  
 • 連續按"O"鍵2次,切換到下一首;  
 • 連續按"O"鍵3次,播放前一首曲目;  
 (註:根據所連接的手機不同,操作方式可能會有所不同)

## 警告語

- 為保證您的人身安全,請確保您的耳機沒有戴在心律調整器上,也沒有放在心律調整器附近(距離不超過10釐米)。
- 不要將插頭插入插座。
- 兒童需要監督使用。這個產品不是玩具。



### 重要信息

在Hi-Fi系統模式進行開關操作或插入耳機可能會導致滴答聲。在高音量設置可能會影響您的聽力。因此,在切換不同的音源(調諧器、唱機、CD播放器等)或插入耳機之前,一定要將音量控制設置到最小。為了交通安全,開車或騎自行車時不要戴耳機。耳塞可能因長期存放或使用而損壞。



 
### 關於廢棄電器用戶處置的信息&電子設備(私人住宅)

產品和/或隨附文件上的這個標誌表示,使用過的電氣和電子產品不應與一般生活垃圾混舍。如要進行適當的處理、回收及循環再造,請將有關產品送往指定的回收站,以便免費接收。或者,在一些國家,您可以在購買同等的新產品時將產品運送到當地的零售商。正確處理本產品有助於節約寶貴的資源,防止對人體健康產生任何潛在的負面影響。

### 關於在歐盟以外其他國家處置的信息

這個標誌只在歐盟有效。如果您想丟棄此產品,請與您當地的管理部門或經銷商聯繫,並詢問正確的處理方法。

## 빠른 시작 안내서

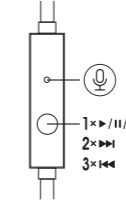

이어폰 착용후:  
 • "O"버튼 클릭시 재생/정지;  
 • 전화수신시 "O"버튼 클릭;  
 • 음악감상시 연속2회 "O"버튼 클릭시 다음곡으로 이동;  
 • 음악감상시 연속3회 "O"버튼 클릭시 이전곡으로 이동.  
 (주의사항:연결된 휴대폰기종에따라 조작방법이 다소 다를수있음)

## 경고문

- 이어폰 사용 시 페이스 메이커를 착용한 상태 혹은 페이스 메이커가 있는 10cm 범위 내에서 사용하지 마실 것.
- 플러그 잭을 플러그에 꽂지 마실 것.
- 본 제품을 장난감이 아님으로 어린이의 손에 닿지 않도록 주의



### 중요 메시지

hi-fi 시스템 모드 전환시 전원 키&끄기 및 이어폰 삽입 시 베-소리가 나며 고음으로 청취 시 청각에 무리가 갈 수 있으므로 음악 등 사용 전 음량을 최소로 미리 조정후 사용하시길 바랍니다. 교통안전을 위하여 운전 및 자전거 이용 시 사용하지 말아주세요.



### 전자기기 개인 폐기 처리 방침

제품의 포장 및 설명서에 표기된 해당 표기는 사용한 전자기기 제품 폐기 및 재활용 시에 반드시 일반 쓰레기와 분리하여 지정된 폐기& 재활용 지정 폐기 및 재활용 처리해야 할 것이며 일부 국가에서는 제품 구매내 지점에서 폐기&재활용으로 반환 가능합니다.

### 유럽 외 기타 국가에서의 폐기 처리 방식

이 표시는 유럽에서만 적용되는 폐기 처리 방식이므로 기타 국가에서는 현지 관리 방침에 따라 폐기 처리하시길 바랍니다.

## WARRANTY CARD

### SET UP INFORMATION & PRODUCT REGISTRATION

Congratulations with the purchase of your new Product. We have done our utmost to make your experience the best one possible. If you have any questions when setting up your Product and would like some helpful hints, we recommend that you visit the relevant country specific support website for your Product. There you will also find relevant contact information. If you cannot find the information you are looking for, please contact the vendor that sold the Product to you or contact the relevant HARMAN customer support center by electronic mail or phone.

We recommend that you register your Product via the relevant country specific website for your Product. Your registration will allow us to inform you about updates for certain products, possible new offers and new Products and/or applications. Registering is easy; just follow the instructions on the relevant country specific website for your Product.

**NOTE: IF YOU PURCHASED PRODUCTS IN INDIA, PLEASE VISIT WWW.HARMANWARRANTY.IN TO REGISTER FOR WARRANTY**

### LIMITED WARRANTY

#### WHO IS PROTECTED BY THE WARRANTY

This limited warranty (the "Limited Warranty") protects only the original end-user ("you" or "your"), and is not transferable and is applicable only in the country (excluding EEA member states and the Russian Federation) in which you originally purchased your INFINITY Product (the "Product"). Any attempt to transfer this warranty shall immediately make this warranty void.

#### LIMITED WARRANTY

HARMAN International Industries, Incorporated ("HARMAN") is the manufacturer and through its local subsidiary, warrants to you that the Product (including components provided in with the Product) will be free from defects in workmanship and materials for a period of ONE year from the date of retail purchase by you (the "Warranty Period"). During the Warranty Period, the Product (including components) will be repaired or replaced at HARMAN's option, without charge for either parts or labor OR at HARMAN's sole option, the price of the Product may be refunded, subject to depreciation based on your purchase price for the Product pro-rated over the remaining balance of the Warranty Period. Any warranty service or replacement of parts will not extend the Warranty Period.

This Limited Warranty does not cover defects which are a result of: (1) damage caused by accident, unreasonable use or neglect (including the lack of reasonable and necessary maintenance); (2) damage during shipment (claims must be presented to the carrier); (3) damage to, or deterioration of, any accessory or decorative surface; (4) damage resulting from failure to follow instructions contained in your owner's manual; (5) damage resulting from the performance of repairs by someone other than HARMAN authorized service center; (6) deterioration of component parts, the nature of which is to become worn or depleted with use, such as batteries and headphone ear sleeves.

Furthermore, this Limited Warranty covers only actual defects within the Product itself, and does not cover the cost of installation or removal from a fixed installation, setup or adjustments, claims based on misrepresentation by the seller, performance variations resulting from installation-related circumstances such as source quality or AC power or Product modifications, any unit on which the serial number has been effaced, modified or removed, or units used for other than home use. This Limited Warranty is valid only for INFINITY products purchased from an authorized dealer.

Except to the extent expressly prohibited by your jurisdiction by applicable law, all implied warranties, including fitness for a particular purpose and merchantability are hereby excluded and in no event shall HARMAN or any HARMAN subsidiary be liable for any indirect, direct, incidental, special or consequential loss or damages whatsoever (including, without limitation, other pecuniary loss) arising out of the use of or inability to use the Product, even if HARMAN and/or a HARMAN subsidiary have been advised of the possibility of such damages. To any extent that HARMAN cannot lawfully disclaim implied warranties under this Limited Warranty, all such implied warranties are limited in duration to the duration of this warranty. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or exclusions or limitations on the duration of implied warranties or conditions, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary by jurisdiction.

#### HOW TO OBTAIN WARRANTY SERVICE

For a seamless experience please register your product at www.harmanwarranty.in (if you purchased products in India). Information on service centers can be found on the registration page. Otherwise, please contact the dealer who sold you this Product, or contact HARMAN customer support using the contact information on the relevant country specific support website for your Product to request warranty service. To validate your right to this Limited Warranty, you must provide the original sales invoice or other proof of ownership and date of purchase. Do not return your Product without prior authorization from the corresponding dealer or HARMAN. Warranty repair of the HARMAN Product must be carried out by HARMAN authorized service center. Unauthorized warranty repair will void the warranty and is performed at your sole risk. You are also welcome to consult the relevant country specific HARMAN support website for your Product for helpful hints.

#### WHO PAYS FOR WHAT

This Limited Warranty covers all expenses for labor and materials required for the repair OR replacement of the Product that is found to be defective, and a reasonable return shipping charge within the country of repair. Please be sure to save the original shipping carton(s), because a charge will be made for additional cartons/packaging. You will be charged for the cost of examining a unit that is not in need of repair (including resulting shipping costs), or for necessary repairs not covered by this Limited Warranty. We sincerely thank you for your expression of confidence in INFINITY. We wish you many years of listening pleasure.

## 제품보증서

#### 서비스에 대하여

- 최저 삼성전자에서는 특별별 소비자 분쟁해결 기준(공정거래위원회 고시)에 따라 아래와 같이 보증에 대한 보증을 실시합니다.
- 제품의 고장이 발생하면 하만오디오 전문 서비스센터(☎ 02-553-3494)로 전화주세요.
- 전국 삼성전자서비스센터에서 접수 가능하며, 접수 이후 서비스 과정은 하만오디오 전문 서비스센터(서비스 주식회사)에서 진행합니다.
- 수리료제 후 부품비용은 제사를 방지 및 안전을 위해 전방 회수하는 것을 원칙으로 하고 있습니다.

제품명	모델명
구입일	년 월 일
구입처	판매금액

- 제품의 품질보증기간은 구입 후 12개월, 부품 보증기간은 3년이며, 유통과정에 따라 늘어날 수 있습니다.
- 수리한 날로부터 1년 이내에 교체한 부품/제품에 대하여 고장이 재발할 경우 무상으로 수리합니다.
- 수리가능 여부 등은 요구일로부터 7일 이내에 통보드리며, 실제 수리 및 환불 등의보장은 통보일로부터 14일 이내에 해결해드립니다.
- 무상서비스
  - 품질보증기간 이내에 정상적인 사용상태에서 발생한 고장의 경우 무상서비스를 받을 수 있습니다. (비고장성, 파손은 제외됨)
  - 이 제품을 영업 용도로 전환하여 사용할 경우 보증기간은 절반(6개월)으로 단축됩니다.
- 환자 : 구입자 환급(구입증빙서류 필요)

소미자 피해유형	보상내용		
	보증기간 내	보증기간 후	
부품보증 기간내정 상적인사 용조건 에해당하 는기능성 의고장발생	구입 후 10일 이내에 중요한 수리를 해야 할 경우	제품교환 또는 환급	해당없음
	구입 후 1개월 이내에 중요한 수리를 해야 할 경우	제품교환 또는 무상수리	해당없음
제품 구입시 통송과정 및 제품 설치 중 피해가 발생한 경우	제품교환		
제품 교환이 불가능한 경우	고장원인 제품이 1개월 이내에 중요한 수리(+)를 해야 하는 고장이 발생한 경우	환급	무상수리
	수리 가능	동일한 원인으로 고장이 2회까지 발생한 경우	
부품보증기 간내정상적 인사용조건 에해당하 는기능성 의고장발생	수리 가능	동일한 원인으로 고장이 3회째 발생한 경우	제품교환 또는 환급
	서로 다른 원인으로 고장이 4회째 발생한 경우	제품교환 또는 환급	
소미자가 수리 의뢰한 제품을 사업자가 분실한 경우	제품교환 또는 환급		정액감가상각 금액에 10% 가산하여 환급
	부품 보증 기간 내 수리를 부품을 보유하고 있 지 않아 수리가 불가능한 경우	정액감가상각 금액에 구입가의 5% 가산하여 환급	

\* 제품을 분해하여 부품 교체를 하여야 정상적인 사용을 할 수 있는 상태인 경우

To register for warranty in India, scan QR



www.harmanwarranty.in

HARMAN International Industries, Incorporated  
 8500 Balboa Boulevard, Northridge, CA 91329 USA  
 www.harman.com

HARMAN International Industries, Incorporated. All rights reserved.

Infinity is a trademark of HARMAN International Industries, Incorporated, registered in the United States and/or other countries.

Features, specifications and appearance are subject to change without notice.