

# AVR 135 REMOTE CONTROL FUNCTIONS

- 1** Power Off Button
- 2** IR Transmitter Window
- 3** Program/SPL Indicator
- 4** Power On Button
- 5** Input Selectors
- 6** AVR Selector
- 7** AM/FM Tuner Select
- 8** Dim Button
- 9** Test Button
- 10** Sleep Button
- 11** DSP Surround Mode Selector
- 12** Night Mode
- 13** Channel Select Button
- 14** ▲/▼ Buttons
- 15** ◀/▶ Buttons
- 16** Set Button
- 17** Digital Select
- 18** Numeric Keys
- 19** Tuner Mode
- 20** Direct Button
- 21** Tuning Up/Down
- 22** OSD Button
- 23** Dolby Mode Selector
- 24** DTS Digital Mode Selector
- 25** Logic 7 Mode Select Button
- 26** Skip Up/Down Buttons
- 27** Transport Controls
- 28** Stereo Mode Select Button
- 29** DTS Neo:6 Mode Select
- 30** Macro Buttons
- 31** Disc Skip Button
- 32** Preset Up/Down
- 33** Clear Button
- 34** Memory Button
- 35** Delay/Prev. Ch.
- 36** Speaker Select
- 37** Spare Button
- 38** Volume Up/Down
- 39** TV/Video Selector
- 40** 6-Channel/8-Channel Direct Input
- 41** Mute

