


AVR 7200 FRONT PANEL CONTROLS

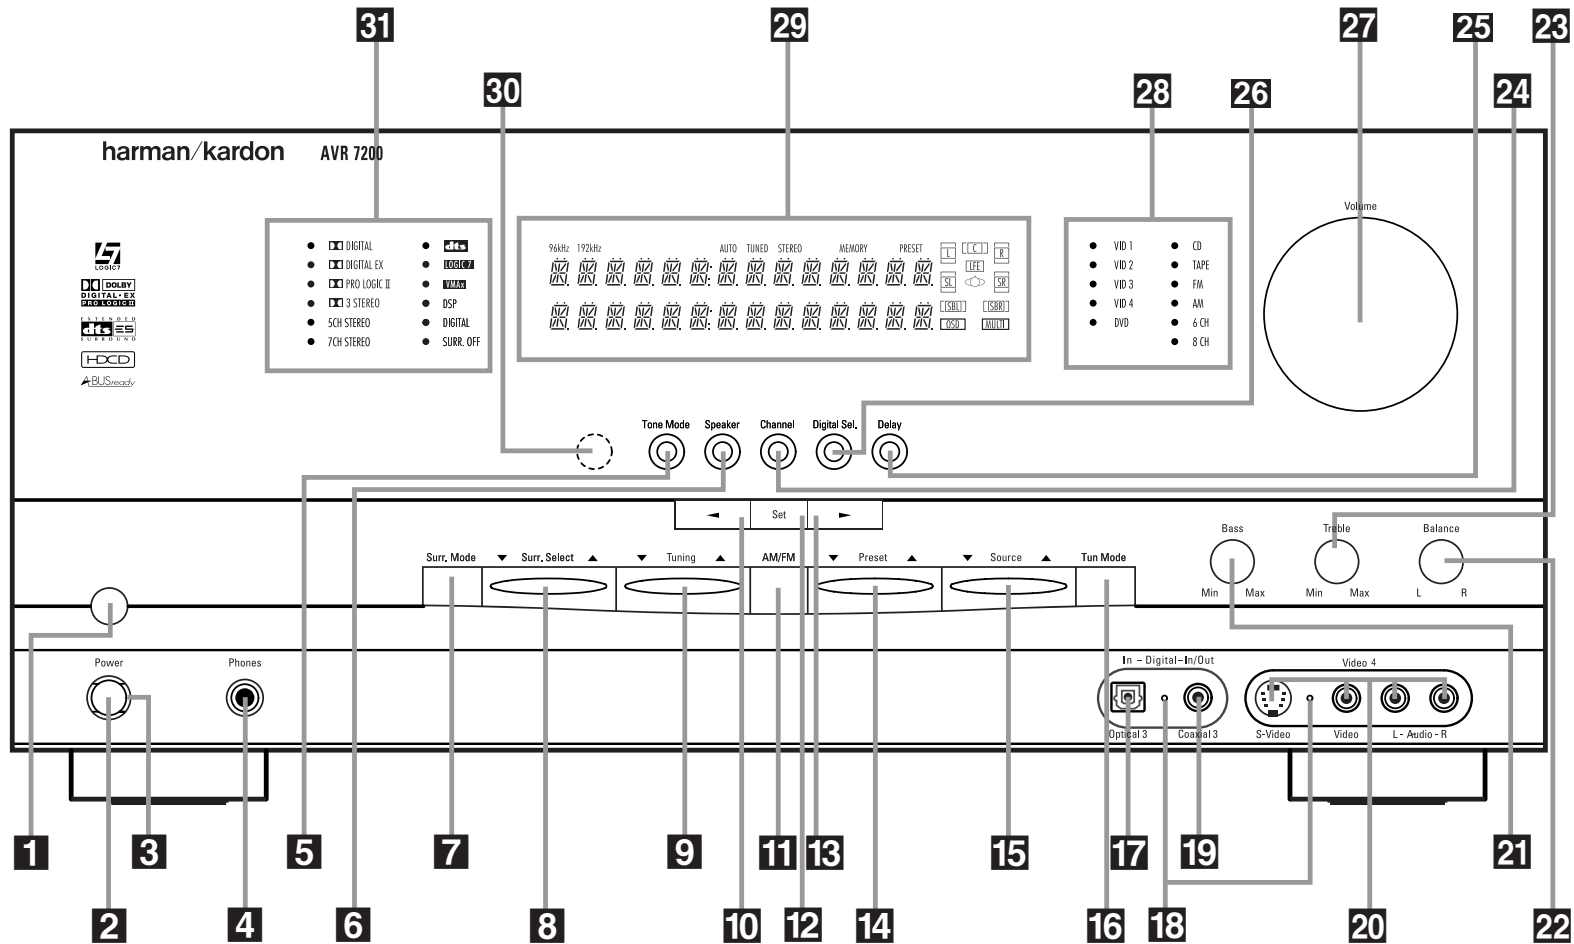

- | | | |
|---------------------------------------|--|------------------------------------|
| 1 Main Power Switch | 12 Set Button | 23 Treble Control |
| 2 System Power Control | 13 ► Button | 24 Channel Adjust Selector |
| 3 Power Indicator | 14 Preset Station Selector | 25 Delay Adjust Selector |
| 4 Headphone Jack | 15 Input Source Selector | 26 Digital Input Selector |
| 5 Tone Mode | 16 Tuner Mode Selector | 27 Volume Control |
| 6 Speaker Selector | 17 Optical 3 Digital Input | 28 Input Indicators |
| 7 Surround Mode Group Selector | 18 Input/Output Status Indicator | 29 Main Information Display |
| 8 Surround Mode Selector | 19 Coaxial 3 Digital Input/Output | 30 Remote Sensor Window |
| 9 Tuning Selector | 20 Video 4 Input/Output Jacks | 31 Surround Mode Indicators |
| 10 ◀ Button | 21 Bass Control | |
| 11 Tuner Band Selector | 22 Balance Control | |