
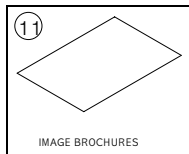
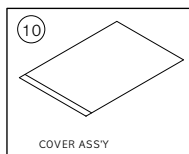
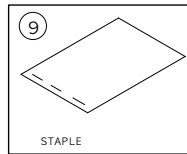
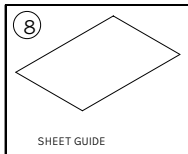
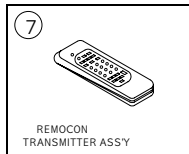
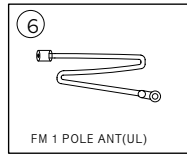
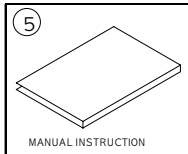
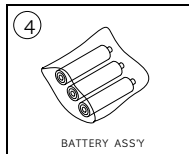
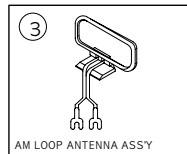
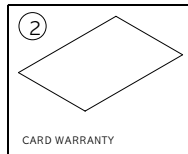



1. Instruction manual ass'y - Accessories

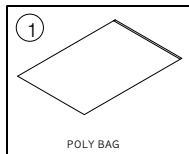

NO	DESCRIPTION	PARTS NO.	Q.ty
1	POLY BAG		1
2	CARD WARRANTY	CQE1A172X	1
3	AM LOOP ANTENNA	CSA1A027Z	1
4	BATTERY		3
5	INSTRUCTION MANUAL	CQX1A1025Z	1
6	FM 1 POL ANT(UL)	CSA1A019Z	1
7	REMOCON TRANSMITTER ASS'Y	HARTAVR140	1
8	SHEET GUIDE(QUICK START GUIDE)	CQE1A258Z	1
9	STAPLE		3
10	COVER ASS'Y	CGRAVR130ZA	1
1	COVER A	CGR1A331M7H43	1
2	COVER B	CGR1A332M7H43	1
3	SHEET, FRONT COVER	CQE1A219Z	1
4	PAD, COVER	CPS1A676	1
5	BAG, POLY		1
11	IMAGE BROCHURES	HQE1A273Z	1

2. Package Drawing

AVR140

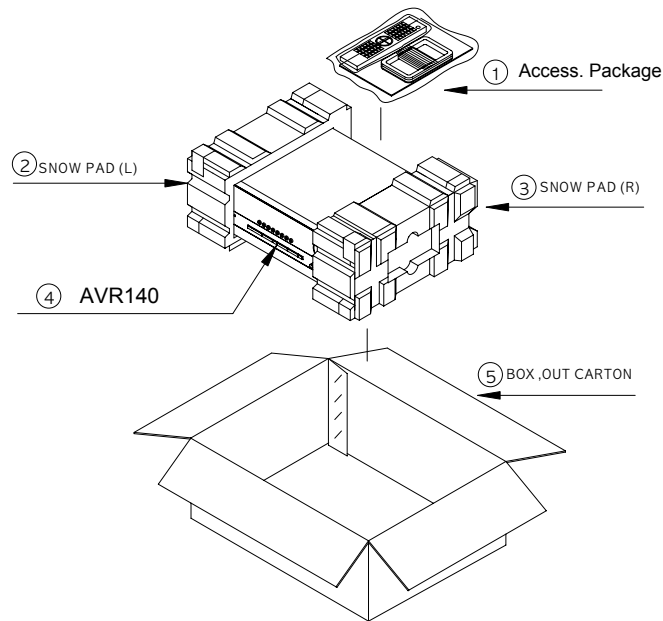

NO	DESCRIPTION	PARTS NO.	Q.ty
1	Access. Package		1
2	SNOW, PAD(L)	CPS5A564	1
3	SNOW, PAD(R)	CPS5A565	1
4	AVR140	AVR 140	1
5	BOX, OUT CARTON	CPG1A797Z	1