


AVR 330 FRONT-PANEL CONTROLS

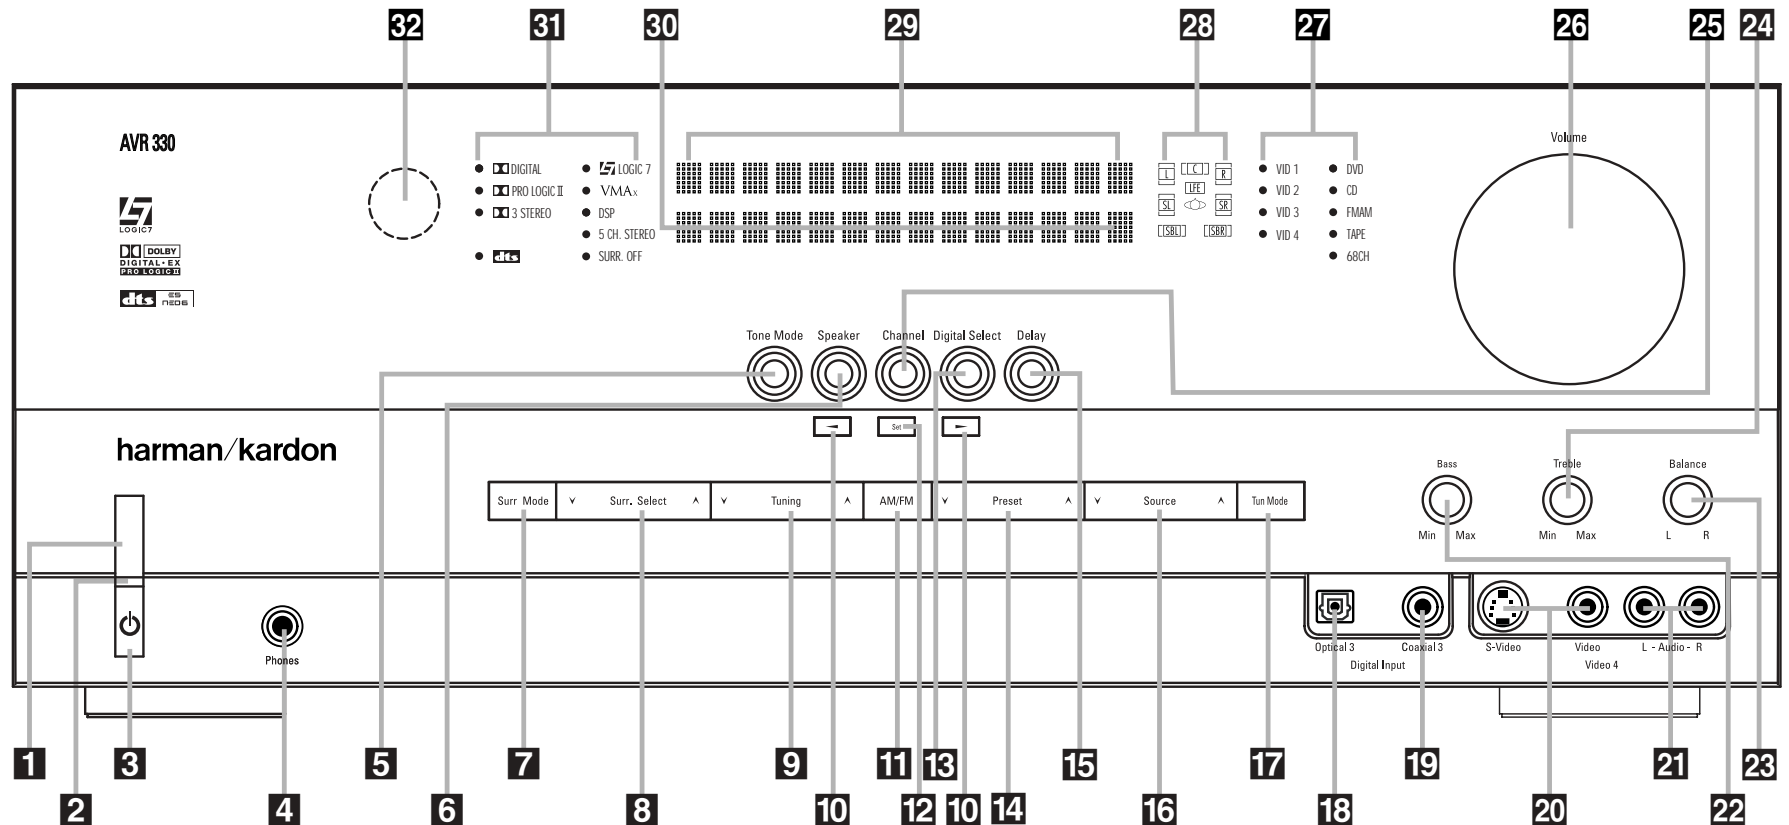

1 Main Power Switch

2 Power Indicator

3 Standby/On Switch

4 Headphone Jack

5 Tone Mode

6 Speaker Selector

7 Surround Mode Group Selector

8 Surround Mode Selector

9 Tuning Selector

10 ◀▶ Buttons

11 Tuner Band Selector

12 Set Button

13 Digital Input Selector

14 Preset Station Selector

15 Delay Adjust Selector

16 Input Source Selector

17 Tuner Mode Selector

18 Optical 3 Digital Input

19 Coaxial 3 Digital Input

20 Video 4 Video Input Jacks

21 Video 4 Audio Input Jacks

22 Bass Control

23 Balance Control

24 Treble Control

25 Channel Adjust Selector

26 Volume Control

27 Input Indicators

28 Speaker/Channel Input Indicators

29 Upper Display Line

30 Lower Display Line

31 Surround Mode Indicators

32 Remote Sensor Window