


# DVD 25 FRONT-PANEL INFORMATION DISPLAY

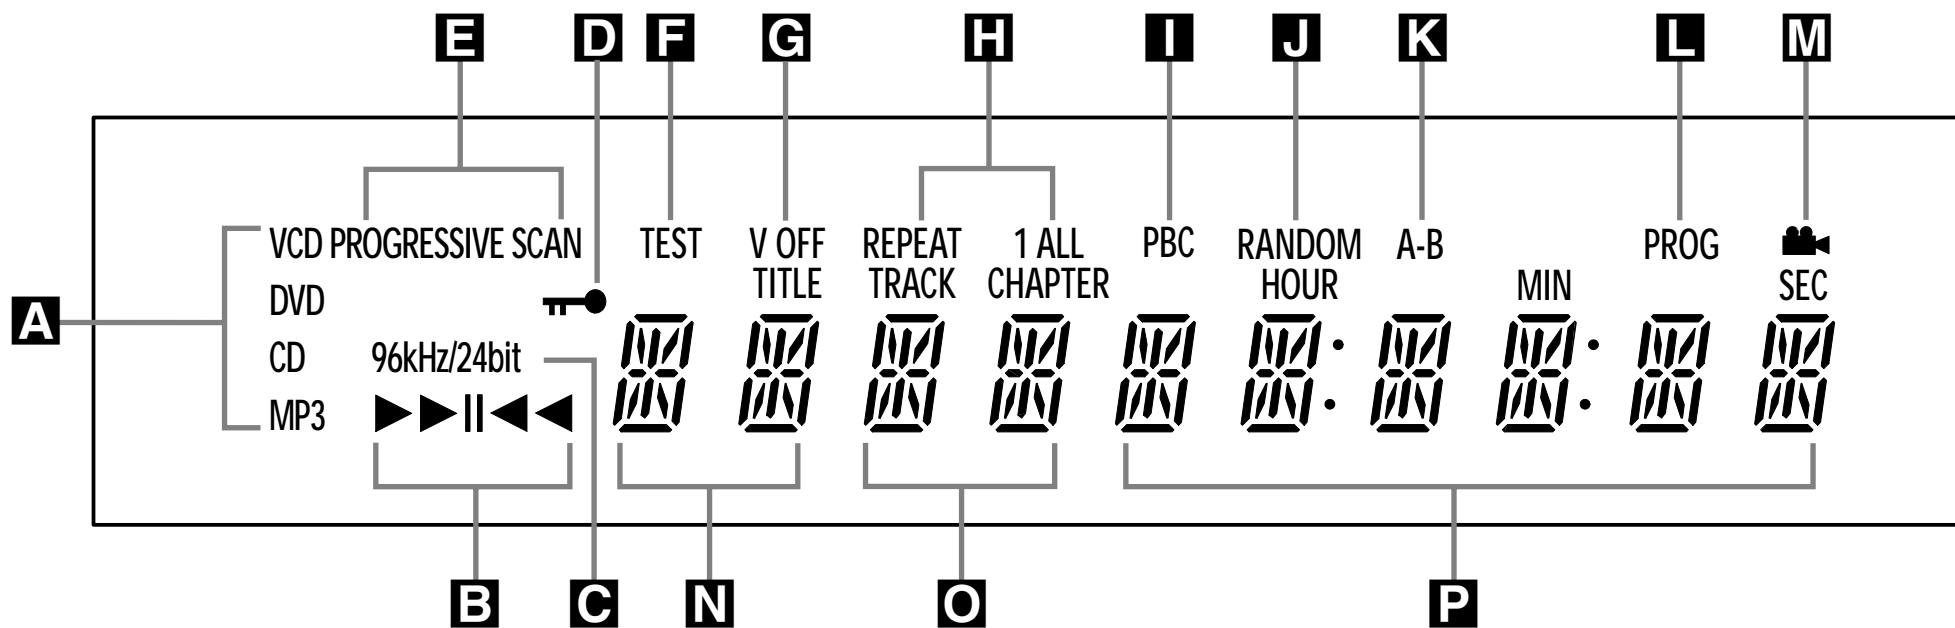

**A** Disc-Type Indicators

**B** Playback-Mode Indicators

**C** 96kHz/24-Bit Indicator

**D** Parental Lock Indicator

**E** Progressive Scan Indicator

**F** Test Indicator

**G** V-OFF Indicator

**H** Repeat Indicator

**I** VCD Playback Control Indicator

**J** Random Indicator

**K** A-B Repeat Indicator

**L** Program Indicator

**M** Angle Indicator

**N** Title Indicators

**O** Chapter/Track Number Indicators

**P** Time Indicators