


CD5

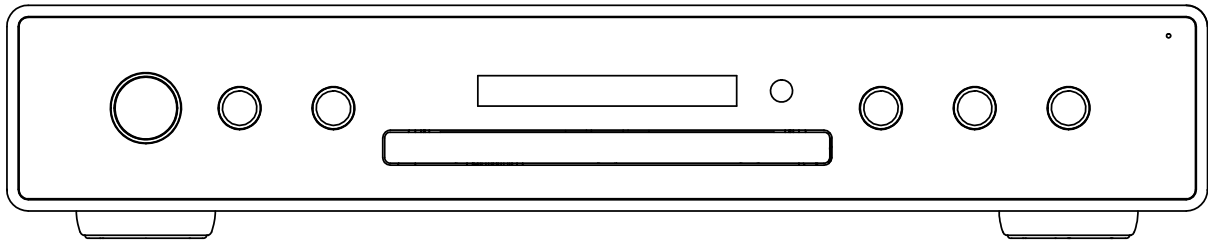

USB Update Instructions

Required Materials:

- Blank USB stick FAT32 formatted, maximum 8Gb

Instructions:

PART 1:

- Unzip and copy the unzipped files (named **updata.cdp** and **usrcd05.bin**) to the USB stick.
- Power on the CD player remove any discs from the player and close the drawer.
- Plug USB stick into the back of the CD player.
- Press and hold both the STOP and PLAY/PAUSE key on the front panel for 5 seconds display will show “CD UPDATING”
- Once completed the CD player will show “NO DISC”.
- Remove the USB stick.

PART 2:

- Power off the CD player with the mains switch on the back of the CD player.
- While pressing and holding the STANDBY button on the front panel power on the CD player with the mains switch
- Release the STANDBY button, POWER LED should not be lit.
- Plug USB stick into the back of the CD player.
- After a brief pause the POWER LED will light.
- Remove the USB stick.

Update is complete.

To Check Version

- Power on the CD player remove any discs from the player and close the drawer.
- Press and hold the SKIP FWD and SKIP BACK buttons on the front panel for 5 seconds.
- Version numbers will be displayed on screen

MCU V1.24/ CD V6.0

Initial release

MCU V1.24/ CD V6.2

- Add gapless playback of Compact Discs

MCU V1.35/ CD V6.4

- Reduce power LED brightness
- Improve track scan function
- Display improvements
- Add gapless playback for Enhanced CD playback