


AVR 645 FRONT-PANEL CONTROLS

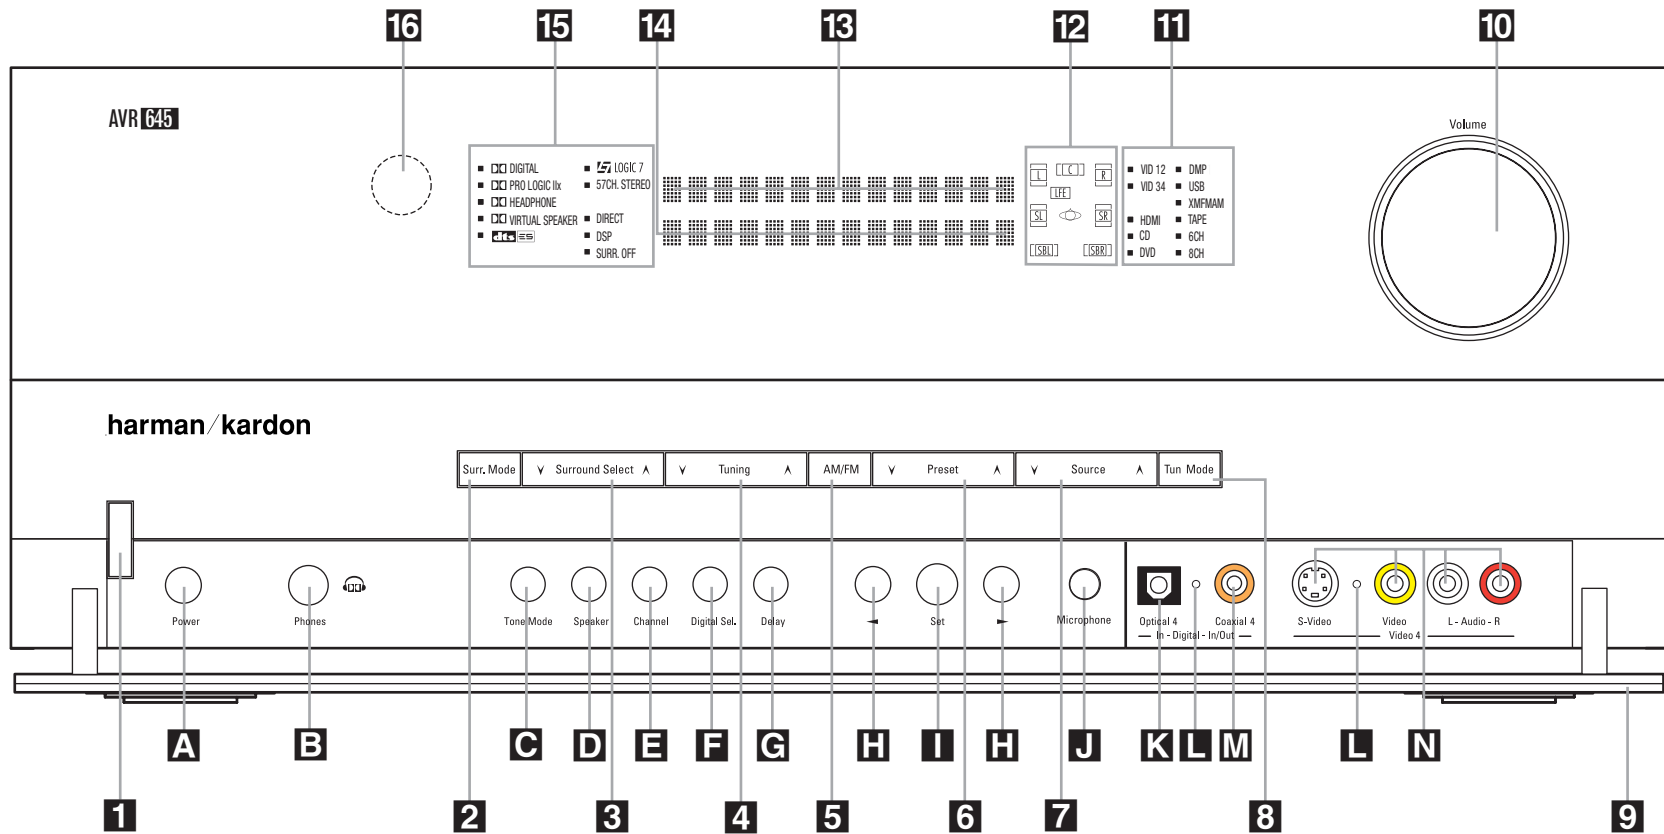

The following controls and indicators are available on the AVR 645's front panel:

- | | | | |
|---------------------------------------|----------------------------------|--|------------------------------------|
| 1 Standby/On Switch | 5 Tuner Band Selector | 9 Front-Panel Door | 13 Upper Display Line |
| 2 Surround Mode Group Selector | 6 Preset Station Selector | 10 Volume Control | 14 Lower Display Line |
| 3 Surround Mode Selector | 7 Input Source Selector | 11 Input Indicators | 15 Surround Mode Indicators |
| 4 Tuning Selector | 8 Tuning Mode Selector | 12 Speaker/Channel Input Indicators | 16 Remote Sensor Window |

The following controls and jacks are located behind the front-panel door. To open the door, place the edge of a finger on the left or right edge of the panel and gently swing the door down toward you.

- | | | | |
|----------------------------------|----------------------------------|--|-------------------------------------|
| A Main Power Switch | E Channel Adjust Selector | I Set Button | M Coaxial 4 Digital Jack |
| B Headphone Jack | F Digital Input Selector | J EzSet/EQ Microphone Jack | N Video 4 Input/Output Jacks |
| C Tone Mode Button | G Delay Adjust Selector | K Optical 4 Digital Input | |
| D Speaker Selector Button | H ◀▶ Buttons | L Input/Output Status Indicator | |