

AVR 525 MAIN REMOTE CONTROL FUNCTIONS

- 1** Power Off Button
- 2** IR Transmitter Window
- 3** Program/SPL Indicator
- 4** Power On Button
- 5** Input Selectors
- 6** AVR Selector
- 7** AM/FM Tuner Select
- 8** 6-Channel/8-Channel Direct Input
- 9** Test Button
- 10** Sleep Button
- 11** Surround Mode Selector
- 12** Night Mode
- 13** Channel Select Button
- 14** ▲/▼ Buttons
- 15** ◀ Button
- 16** Set Button
- 17** Digital Select
- 18** Numeric Keys
- 19** Tuner Mode
- 20** Direct Button
- 21** Tuning Up/Down
- 22** OSD Button
- 23** Dolby Mode Select Button
- 24** DTS Digital Mode Selector
- 25** Logic 7 Mode Select Button
- 26** Transport Controls
- 27** Light Button
- 28** Skip Up/Down Buttons
- 29** Stereo Mode Select Button
- 30** DTS Neo:6 Mode Select
- 31** Macro Buttons
- 32** Disc Skip Button
- 33** Preset Up/Down
- 34** Clear Button
- 35** Memory Button
- 36** Delay/Prev. Ch.
- 37** ▶ Button
- 38** Speaker Select
- 39** Multiroom
- 40** Volume Up/Down
- 41** SPL Selector
- 42** Learn Button
- 43** Mute
- 44** EzSet Sensor Microphone

