
DPR 2005 FRONT-PANEL CONTROLS

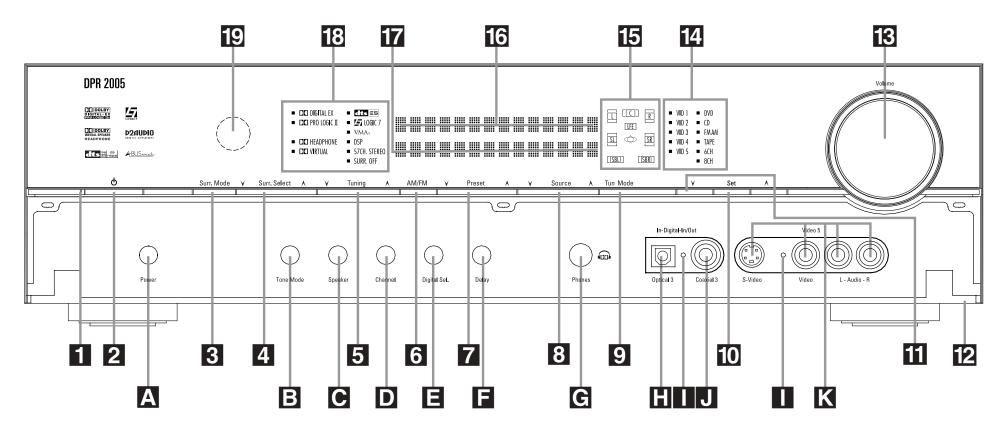

The following controls and indicators are available on the DPR 2005's front panel:

- 1 Standby/On Indicator
- 2 Standby/On Button
- 3 Surround Mode Group Selector
- 4 Surround Mode Selector
- **5** Tuning Selector

- **6** Tuner Band Selector
- **7** Preset Station Selector
- 8 Input Source Selector
- **9** Tuning Mode Selector
- **10** Set Button

- 11 V/ Buttons
- 12 Front-Panel Control Door
- 13 Volume Control
- **14** Input Indicators
- 15 Speaker/Channel Input Indicators
- **16** Upper Display Line
- 17 Lower Display Line
- **18** Surround Mode Indicators
- **19** Remote Sensor Window

The following controls and jacks are located behind the front-panel door. To open the door, press the center of the door and gently swing it down towards you.

- A Main Power Switch
- **B** Tone Mode Button
- **C** Speaker Selector Button
- **D** Channel Adjust Selector
- **E** Digital Input Selector
- **F** Delay Adjust Selector

- **G** Headphone Jack
- Optical 3 Digital Input
- Input/Output Indicators
- J Coaxial 3 Digital Jack
- K Video 5 Audio/Video Jacks