


CDR 26 FRONT-PANEL CONTROLS

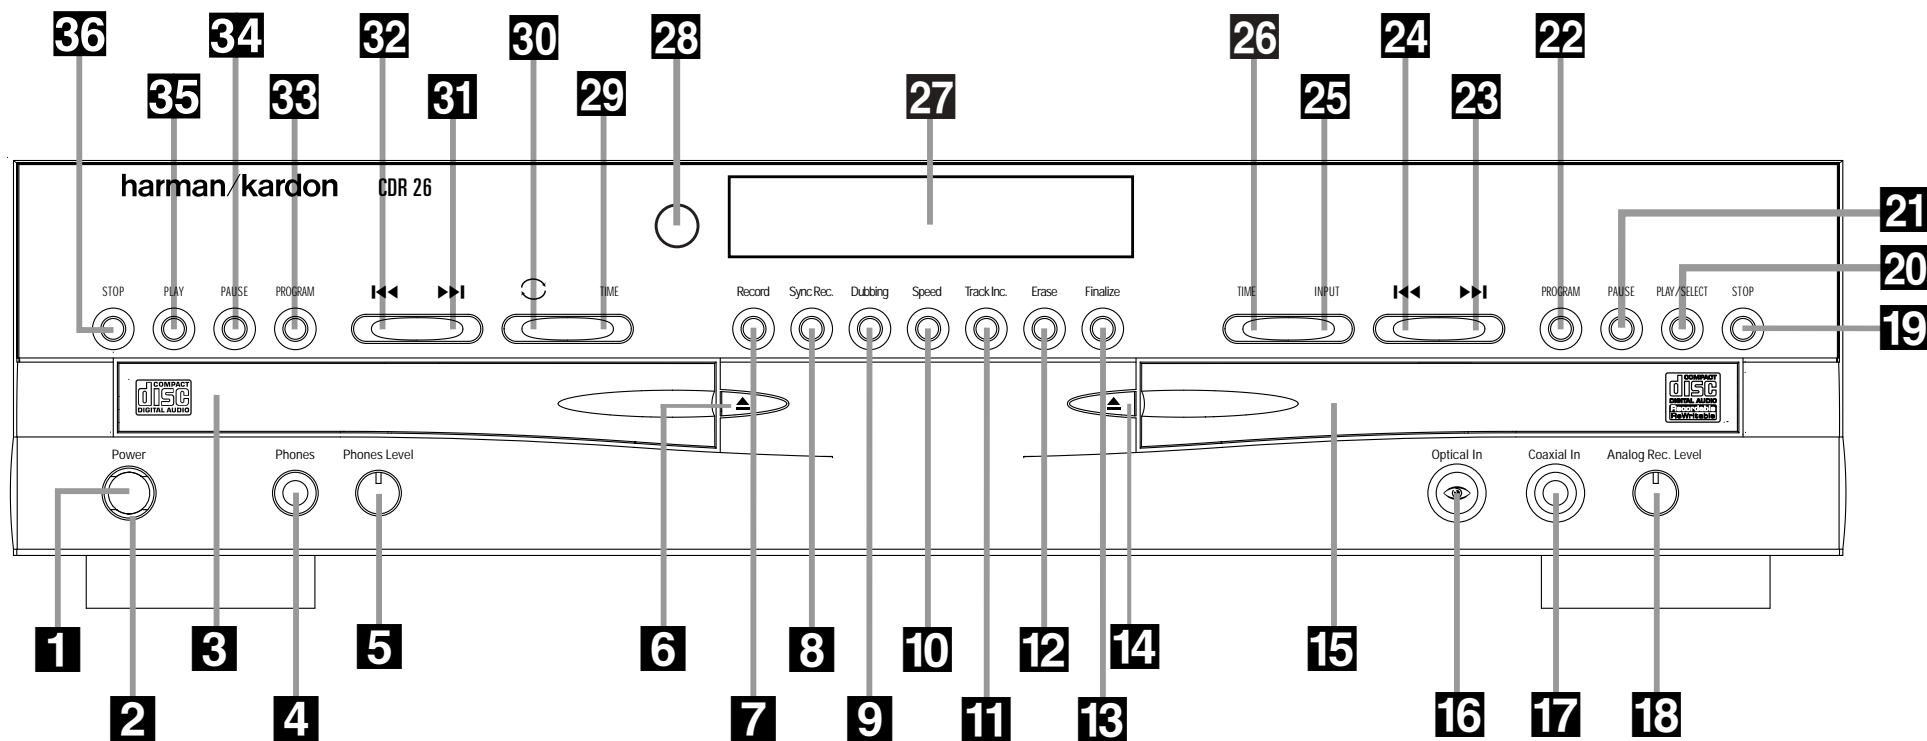

- | | | |
|---|---------------------------------------|---|
| 1 Power Switch | 13 Finalize | 25 Input Select |
| 2 Status Mode Indicator | 14 Record-Deck Open | 26 Record-Deck Time Display Select |
| 3 Play Deck | 15 Record Deck | 27 Information Display |
| 4 Headphone Jack | 16 Optical Digital Input | 28 Remote Sensor |
| 5 Headphone Level Control | 17 Coaxial Digital Input | 29 Play-Deck Time Display Select |
| 6 Play-Deck Open | 18 Analog-Record Level Control | 30 Continuous Play |
| 7 Record Button | 19 Record-Deck Stop | 31 Play-Deck Next |
| 8 Synchronous Recording (CD Sync) Button | 20 Record-Deck Play/Select | 32 Play-Deck Previous |
| 9 Dubbing | 21 Record-Deck Pause | 33 Play-Deck Program Button |
| 10 Speed | 22 Record-Deck Program Button | 34 Play-Deck Pause |
| 11 Track Increment | 23 Record-Deck Next | 35 Play-Deck Play |
| 12 Erase | 24 Record-Deck Previous | 36 Play-Deck Stop |