 
 



## 1. Instruction manual ass'y - Accessories

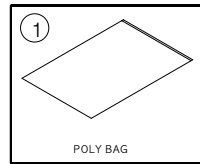


POLY BAG

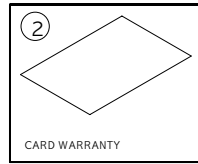

 
CARD WARRANTY

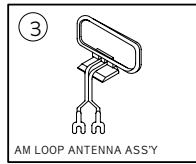


AM LOOP ANTENNA ASS'Y

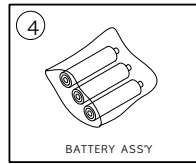 


BATTERY ASS'Y

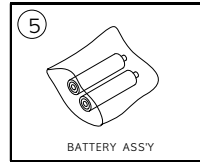 


BATTERY ASS'Y

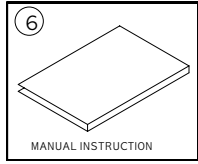 


MANUAL INSTRUCTION

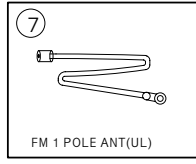 


FM 1 POLE ANT(UL)

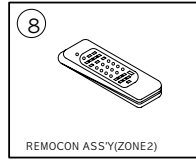 


REMOCON ASS'Y(ZONE2)

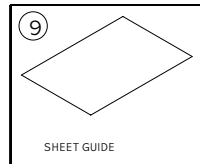 


SHEET GUIDE

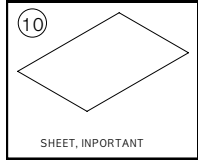 

SHEET, INPORTANT

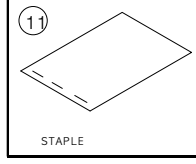 

STAPLE

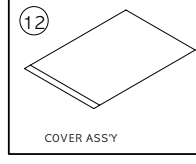 

COVER ASS'Y


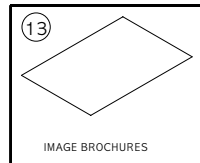 


IMAGE BROCHURES

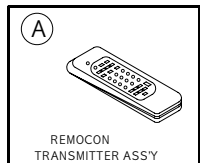 


REMOCON TRANSMITTER ASS'Y

NO	DESCRIPTION	PARTS NO.	Q.ty
1	POLY BAG		1
2	CARD WARRANTY	CQE1A172X	1
3	AM LOOP ANTENNA ASS'Y	CSA1A027Z	1
4	BATTERY		3
5	BATTERY		2
6	INSTRUCTION MANUAL	CQX1A1027Z	1
7	FM 1 POL ANT(UL)	CSA1A019Z	1
8	REMOCON ASS'Y(ZONE2)	RH18Z00	1
9	SHEET GUIDE	CQE1A260Z	1
10	SHEET INPORTANT		1
11	STAPLE		3
12	COVER ASS'Y	CGRAVR130ZA	1
	1 COVER A	CGR1A331M7H43	1
	2 COVER B	CGR1A332M7H43	1
	3 SHEET,FRONT COVER	CQE1A219Z	1
	4 PAD, COVER	CPS1A676	1
	5 BAG, POLY		1
13	IMAGE BROCHURES		1
A	REMOCON ASS'Y	RB30L00	1

## 2. Package Drawing

 AVR340

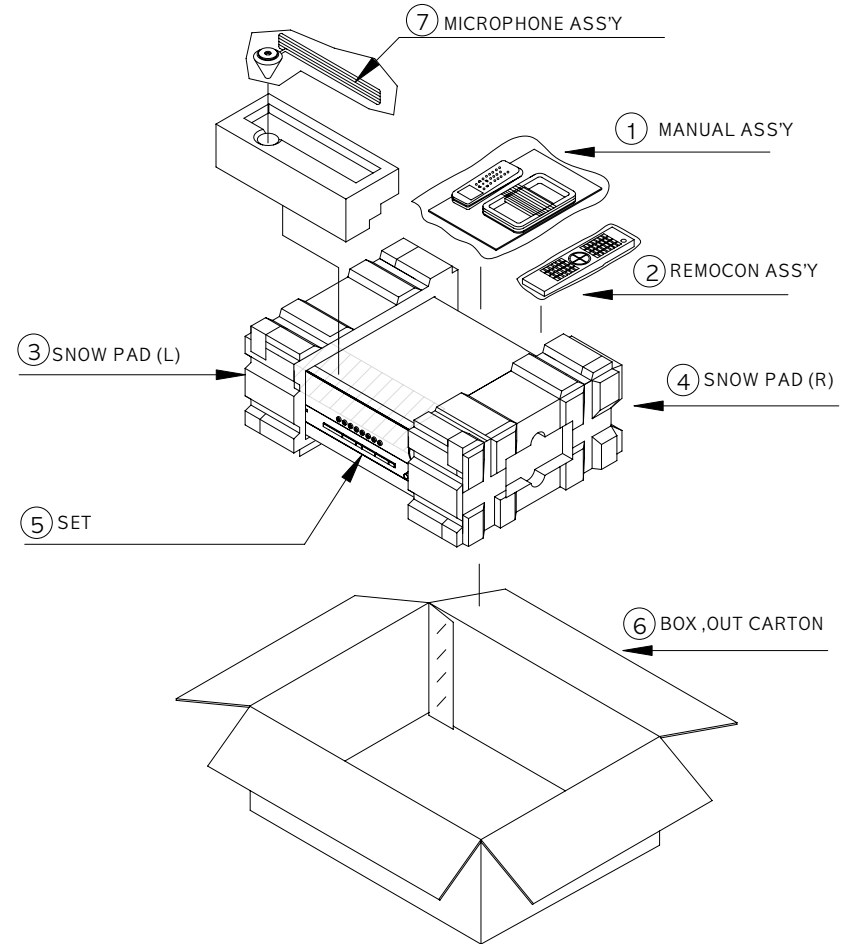

NO	DESCRIPTION	PARTS NO.	Q.ty
1	MANUAL ASS'Y		1
2	REMOCON ASS'Y	RB30L00	1
3	SNOW,PAD(L)	CPS5A564	1
4	SNOW,PAD(R)	CPS5A565	1
5	SET	AVR 340	1
6	BOX,OUT CARTON	CPG1A797X	1
7	MICROPHONE ASS'Y	CJXAVR340MICRO	1