

CDR 26 MAIN REMOTE CONTROL FUNCTIONS

- 1** Power On
- 2** Play Deck (CDP)
Time Display Control
- 3** Play Deck (CDP) Open
- 4** Play Deck (CDP) Select
- 5** Program
- 6** Previous-Track Skip
- 7** Repeat
- 8** Clear
- 9** Reverse Search
- 10** Play
- 11** Random Play
- 12** Dub
- 13** Automatic/Manual Track
Increment Selector
- 14** Track Increment
- 15** Finalize
- 16** Numeric Keys
- 17** Speed Select
- 18** Record Button
- 19** Erase Button
- 20** Input Select
- 21** CD Sync
- 22** Stop
- 23** Pause
- 24** Forward Search
- 25** A-B Repeat
- 26** Next Track/Skip
- 27** Record Deck (CDR) Select
- 28** Record Deck (CDR) Open
- 29** Record Deck (CDR)
Time Display Control
- 30** Power Off
- 31** Continuous Play

