


DVD 27 FRONT-PANEL INFORMATION DISPLAY

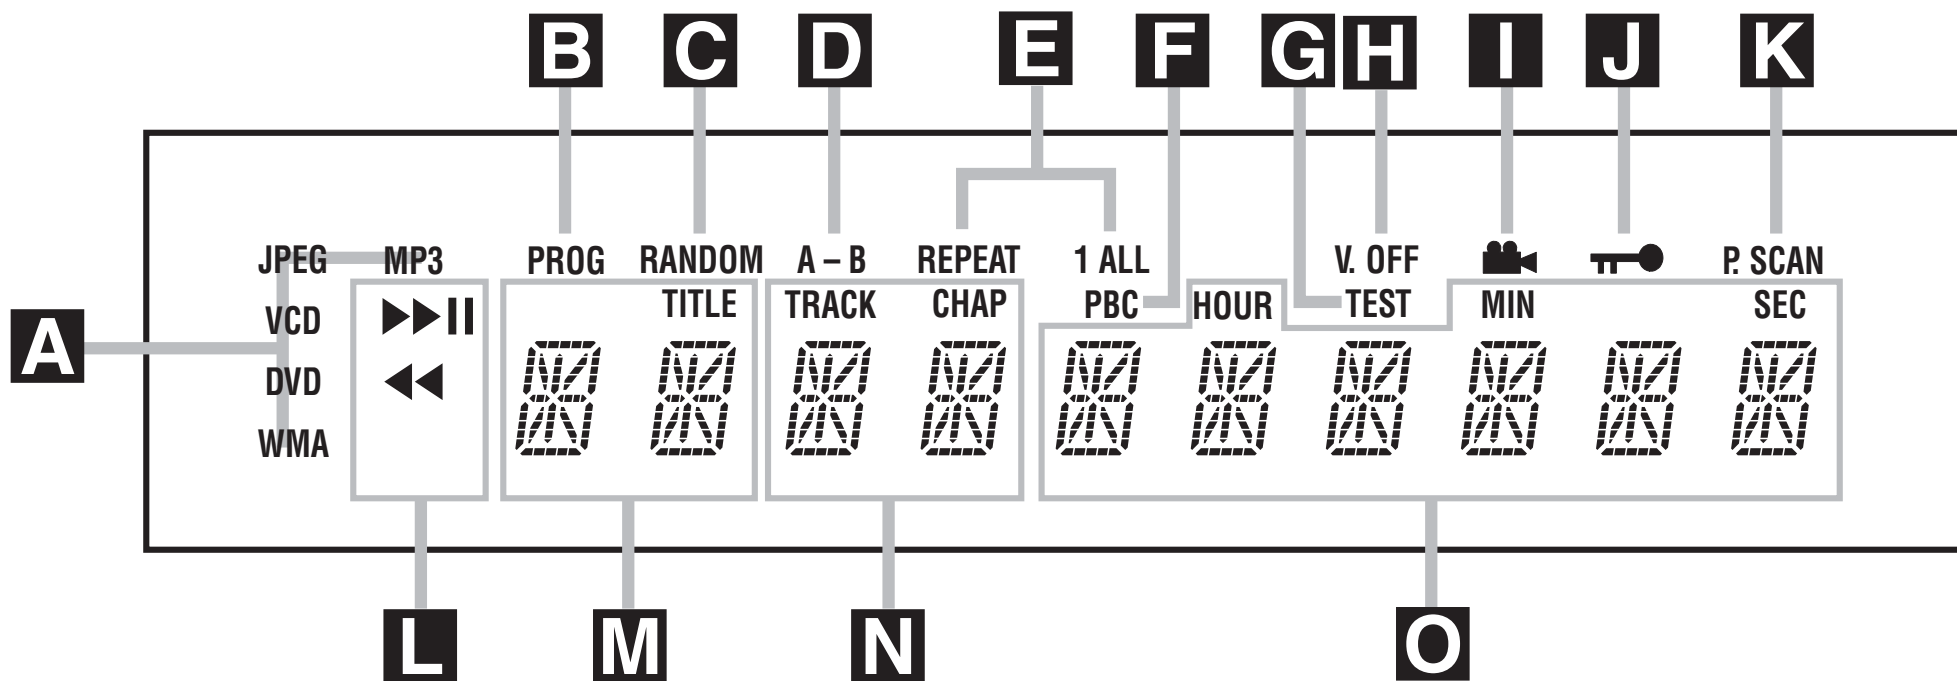

A Disc-Type Indicators

B Program Indicator

C Random Indicator

D A-B Repeat Indicator

E Repeat Indicators

F VCD Playback Control Indicator

G Test Screen Indicator

H V-OFF Indicator

I Angle Indicator

J Parental Lock Indicator

K Progressive Scan Indicator

L Playback-Mode Indicator

M Title Indicators

N Chapter/Track Number Indicators

O Time Indicators