


# DVD 27 CONNECTION GUIDE

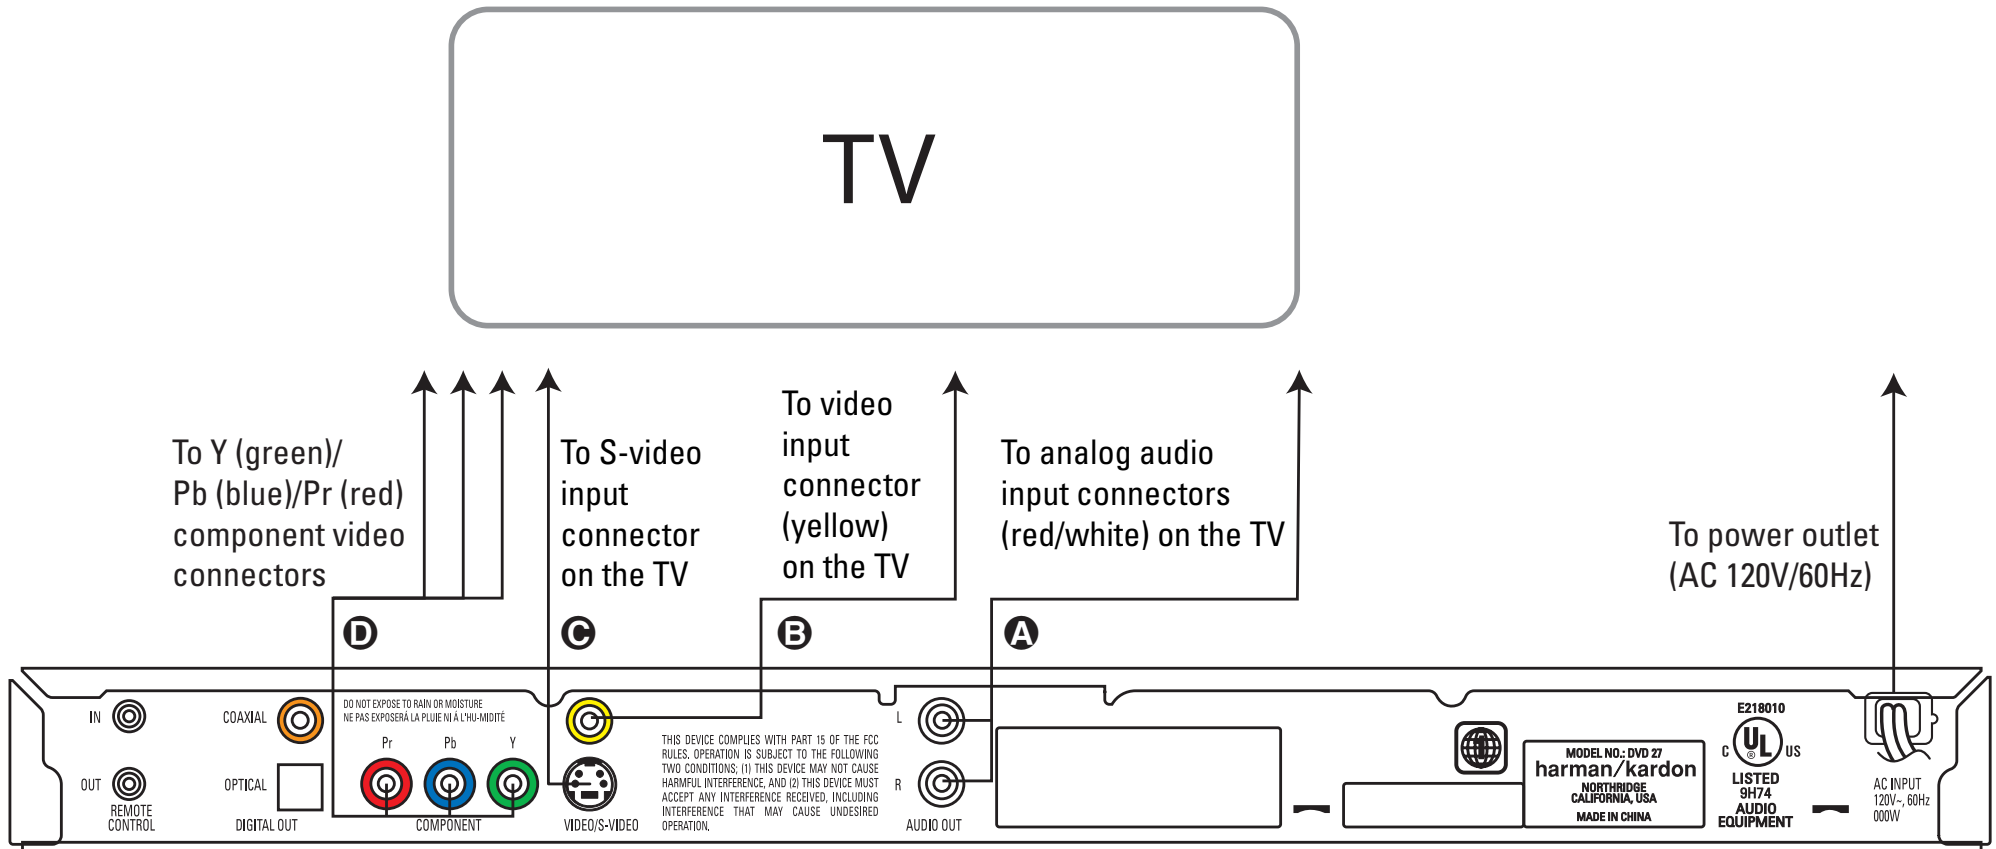

## Connecting to a TV Only

When using the DVD 27 with a television but no audio receiver or processor, connect it as follows. Make the **Analog Audio Connection A** and one of the **Video Connections (Composite Video B, S-Video C or Component Video D)**. Remember to plug in the power cord.

**IMPORTANT NOTE:** Make certain that any device being connected, including the DVD 27, your receiver or processor and your TV or video display, is turned off whenever you make connections between products.