

# AVR 7200 MAIN REMOTE CONTROL FUNCTIONS

- 1 Power Off Button
- 2 Power On Button
- 3 LCD Information Display
- 4 Input Selectors
- 5 AVR Selector
- 6 Test Button
- 7 DSP Surround Mode Selector
- 8 Logic 7 Mode Select Button
- 9 Direct Button
- 10 Clear Button
- 11 Numeric Keys
- 12 Tuning Mode Button
- 13 Channel Select Button
- 14 Navigation Button
- 15 Digital Select Button
- 16 Set Button
- 17 Transport Play Buttons
- 18 Volume Up/Down Buttons
- 19 Transport Fast-Play/Scan Buttons
- 20 Main Transport Controls
- 21 Track Skip Up/Down Buttons
- 22 Preset Up/Down Button
- 23 Tuning Up/Down Button
- 24 Disc Skip Button
- 25 Program Button
- 26 Light Button
- 27 Multiroom
- 28 Macro Buttons
- 29 Sleep Button
- 30 Night Mode Button
- 31 OSD Button
- 32 Mute Button
- 33 AM/FM Tuner Select
- 34 Channel Up/Down Selector
- 35 Delay Select Button
- 36 Speaker Select Button
- 37 Memory Button
- 38 Stereo Mode Select Button
- 39 DTS Neo:6 Mode Select Button
- 40 DTS Digital Mode Select Button
- 41 Dolby Mode Select Button
- 42 6/8-Channel Input Select
- 43 SPL Select Button
- 44 EzSet Microphone Sensor
- 45 Lens

