


AVR 140 FRONT-PANEL CONTROLS

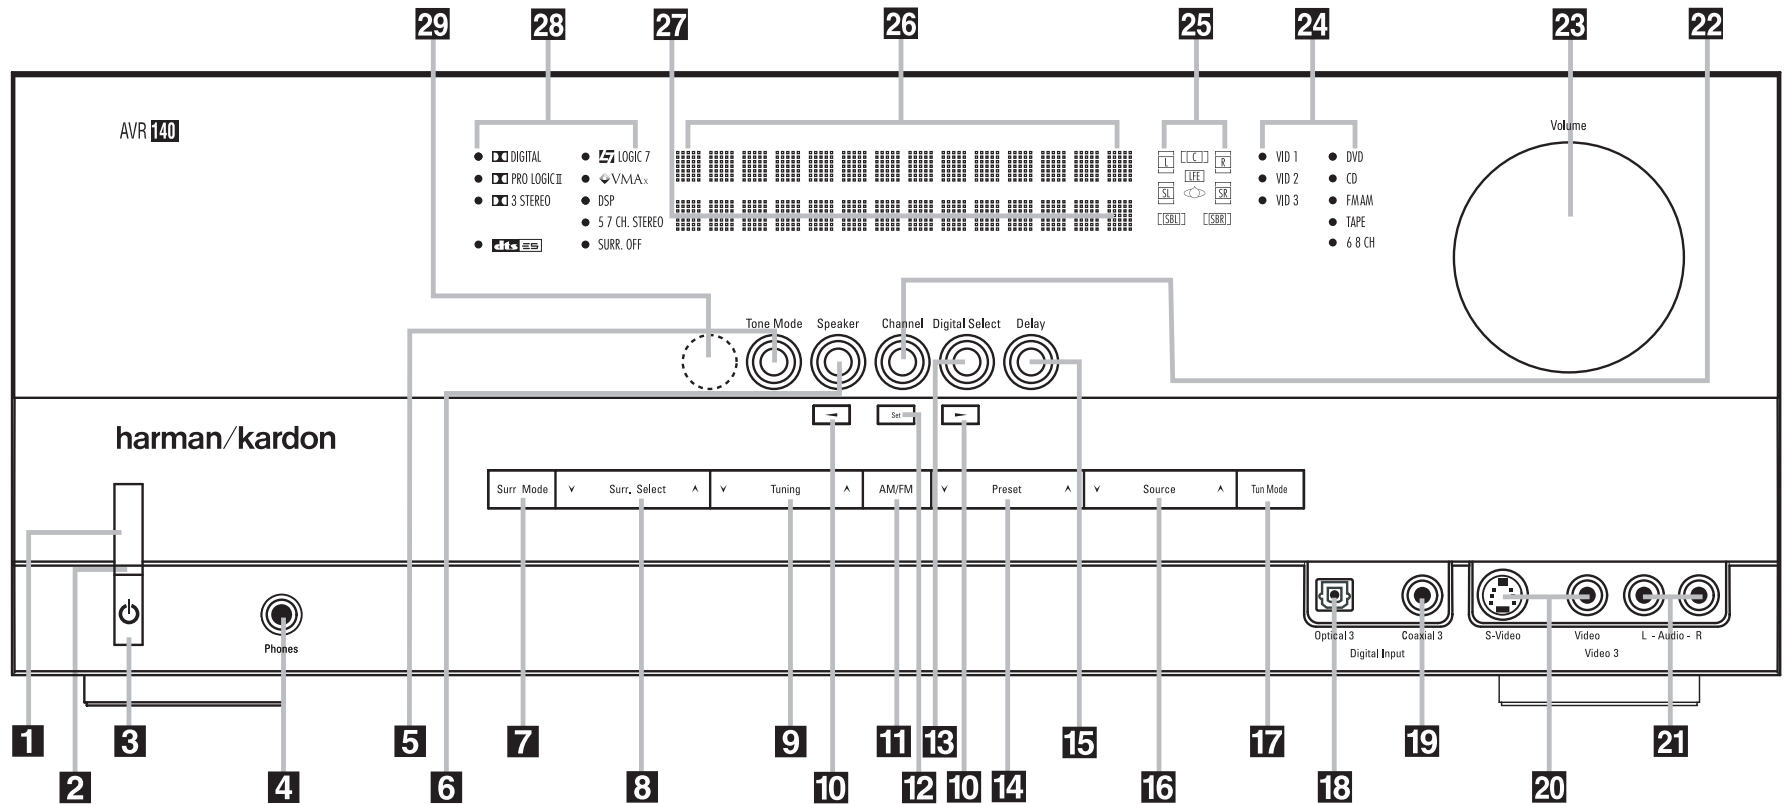

- | | | |
|---------------------------------------|---|--|
| 1 Main Power Switch | 11 Tuner Band Selector | 21 Video 3 Audio Input Jacks |
| 2 Power Indicator | 12 Set Button | 22 Channel Adjust Selector |
| 3 Standby/On Switch | 13 Digital Input Selector | 23 Volume Control |
| 4 Headphone Jack | 14 Preset Station Selector | 24 Input Indicators |
| 5 Tone Mode | 15 Delay Adjust Selector | 25 Speaker/Channel Input Indicators |
| 6 Speaker Selector | 16 Input Source Selector | 26 Upper Display Line |
| 7 Surround Mode Group Selector | 17 Tuner Mode Selector | 27 Lower Display Line |
| 8 Surround Mode Selector | 18 Optical 3 Digital Audio Input | 28 Surround Mode Indicators |
| 9 Tuning Selector | 19 Coaxial 3 Digital Audio Input | 29 Remote Sensor Window |
| 10 ◀▶ Buttons | 20 Video 3 Video Input Jacks | |