

JBL

**MR SERIES
LOUDSPEAKERS**

**OWNER'S
MANUAL**

MR
S E R I E S

M5

MR25

MR26

MR28

MR38

MRV308

MRV310

MR Center

INTRODUCTION

Congratulations on choosing JBL MR Series Loudspeakers. Their highly accurate, uncolored and balanced sound character will greatly increase your enjoyment of recorded music and movies. JBL speakers are built with careful attention to detail, using only the highest quality materials. They will provide many years of excellent performance.

The MR Series is the result of combining traditional JBL Signature Sound performance values with elegant contemporary appearance.

Maximum Radiating Surface Area: MR Series transducers utilize new transducer technology by extending the surface area of the cone allowing for a shorter excursion of the driver without sacrificing critical air movement.

Maximum Efficiency: Larger air movement coupled with shorter coil movement allows the MR transducers to be very efficient. See specifications.

Maximum Transducer Control: Reduces distortion by tightening the control of driver excursion and increasing driver linearity.

Smooth, Accurate, Extended Response: The MR Series transducers, computer-optimized dividing networks, and bass reflex cabinets combine to give clear, crisp, accurate, JBL Signature Sound.

Video Shielding: The MR Center, MRV308, and MRV310 models incorporate magnetic shielding to allow use on or next to Video Monitors/TVs. The magnetic shielding prevents stray magnetic fields from

creating any interference or distortion of the video picture.

PLACEMENT

Bookshelf Models: For the best stereo reproduction, the two loudspeaker systems should be an equal distance from your listening position and separated so that the angle between them, at the listening position, is between 40 and 60 degrees (see Fig. 1). For example, if your listening position is 8 to 12 feet (2.5m to 4m) from each speaker, the two systems should be about 8 feet (2.5m) apart. Placing the loudspeakers in corners or against a wall will result in the strongest (not necessarily the most accurate) bass. Except for the M5, all MR Series speakers have their ports in the front so you can place the rear of the speaker up against a wall. In the case of the M5, do not place the speaker closer than 3 inches (75mm) to the wall behind it if possible.

For the best stereo imaging, we recommend that the systems be placed so that the high frequency transducers are positioned approximately at ear level of a seated listener. Every room is different and there are different tastes, so don't hesitate to experiment on your own.

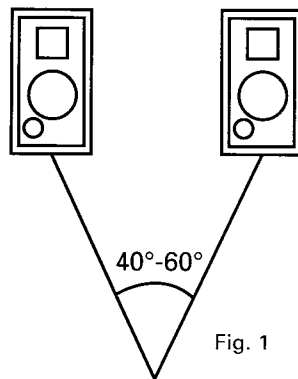


Fig. 1

Tower Models: The Tower models cabinet height and driver placement allow for speaker placement directly on the floor. The video shielding of the Tower models allows for the option of placement very close to a Video Monitor/TV. When the Tower models are used as Left and Right Channel speakers in a Dolby ProLogic AV system, the shielding allows the speakers to be placed up against the sides of the Monitor/TV for a compact AV system profile (see Fig 2). If you desire better stereo imaging, the speakers should be moved further apart from each other, approximately 2 to 3 feet (.75 to 1m) from the sides of the Monitor/TV.

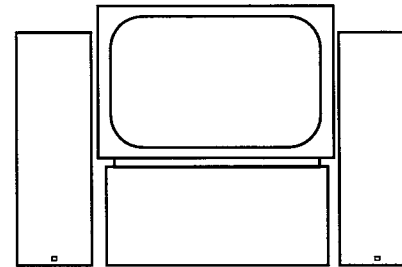


Fig. 2

Center Channel Model: As the center channel contains the dialog and other central action sounds, the speaker should be located very close to the Monitor/TV and centered with the Monitor/TV's center line. Place the MR Center directly on top of or directly below the Monitor/TV with the front edge of the speaker grille flush with the edge of the Monitor/TV. You should have your Left and Right speakers within a 2 ft or less height range of your Center Channel for proper sonic performance (see Fig 3).

In Case Color Interference Occurs: The speaker is shielded to work with video applications, however some color interference may be observed on the TV screen depending on the

type of your TV set. If color interference is observed, turn your TV off for 15 minutes and move the speaker back about 1" from the front edge of the TV. Turn on TV and recheck. If this is not far enough, move back further and experiment until the interference disappears. You may have to turn the TV off for a few minutes and turn it on again to clear the screen.

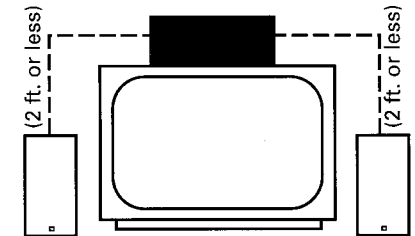


Fig. 3

CONNECTIONS

To connect the loudspeaker systems to the receiver or amplifier, use two-conductor insulated wire. Your JBL dealer can recommend suitable cables, or you can buy wire at most hardware or electronic stores. We recommend #16 AWG wire as a minimum size. If your speaker is more than 30 feet (10m) from your receiver or amplifier, use larger diameter lower gauge wire. Connections are made at the terminals located on the back of the MR Series speakers.

Preparing the Hookup Wire

Carefully plan your wire lengths before cutting any speaker wire. Be sure to allow plenty of extra wire to help hide paths in corners, along baseboards, etc.

1. For Left and Right Speakers, first determine the wire length needed between the most distant speaker and the receiver or amplifier.

2. Now make the hookup wires for both speakers this length, even if one loudspeaker is much closer to your amplifier than the other. This will help maintain proper signal balance. (For the MR Center, determine the length needed from AV receiver's center channel output to speaker).

3. Strip off $\frac{3}{8}$ " of insulation from both ends of each conductor.

4. Twist each set of thin wires into a tightly-bunched spiral.

5. At this point you need to identify a visual difference between the two conductors of each molded pair of speaker wire. Differentiating marks can be a different color wire (copper or "silver"); a strand of yarn in one conductor; thin, raised ribs on one part of the outer insulation; or a printed "+" marking on one of the insulators. It does not make any difference which of the two strands of wire go to (+) and (-) on the speakers and amplifier, as long as all speakers used in your system are connected identically. Push down on the button below the terminal and insert the wire through the hole.

For each channel, the red terminal on all loudspeakers should be connected to the red or (+) speaker connection terminal on the receiver or amplifier,

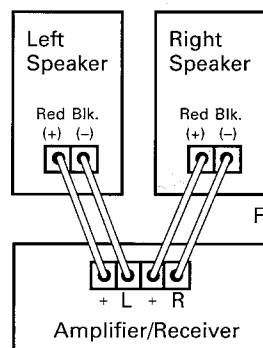


Fig. 4

and the black to black or (-) speaker connection terminal (see Fig. 4). Connecting the loudspeakers in this manner ensures that they will be in phase; that is, work together rather than in opposition. This is very important when connecting several speakers together in a Dolby Pro-Logic AV application. Connecting the loudspeakers out of phase will not damage them, but will result in less bass and poor imaging.

When connecting the MR Center or other MR Series speakers to a Dolby Pro-Logic AV receiver, refer to the instructions accompanying your AV component for use of the "test tone" to properly balance the sound output from each speaker. The use of the "test tone" and the controls on your AV receiver will enable you to correctly balance the level (volume) of sound coming from each speaker in your Dolby Pro-Logic application.

Hooking Up Multiple Sets of Speakers

If your receiver has two complete sets of speaker terminals ("A" and "B"), it's possible to hook up an additional pair of speakers for *simultaneous* sound in another room. However, some speakers may not be usable as a second pair if you want to play two sets at once. Before hooking up another set of speakers besides your MR Series loudspeakers, check the following:

1. Your amplifier's **minimum load impedance**.

2. The **nominal impedance** of the second set of speakers. Both of these specifications are expressed in ohms and both can be found in the owner's manuals which came with your speakers and amp/receiver. The receiver's minimum load impedance is determined by whether or not

power ratings are given for 4 ohms. This is because two sets of 8 ohm speakers will present a 4 ohm load to the receiver. The MR speaker, when combined with an 8 ohm speaker, produces an impedance sufficiently close to 4 ohms. For example, the following entry in an amplifier owner's manual...

POWER:

A) 100 watts RMS into 8 ohms, both channels driven, 20-20kHz with less than 0.02% THD

B) 160 watts RMS into 4 ohms, both channels driven, 20-20kHz with less than 0.02% THD.

Part B indicates that the amplifier can handle 4-ohm combined impedances created by two sets of speakers. If only an 8-ohm rating is given, the amp/receiver may or may not be designed to handle 4-ohm combined ratings. Consult the owner's manual of the amp/receiver for clarification.

POWER HANDLING

Thanks to their high efficiency, the JBL MR Series Loudspeakers will produce reasonable volume levels in a room of moderate size with very little amplifier power. However, using a small amplifier to obtain the desired volume listening levels may lead to overdriving the amplifier. This will generate high distortion levels and may cause damage to your loudspeaker. For the best performance, an amplifier should be selected with an output rating that is greater than the maximum power that will be used. This margin of reserve power will ensure that the amplifier will not attempt to deliver more power than its design allows. However, the amplifier's power rating per channel must not exceed the maximum recommended amplifier power for that

specific loudspeaker model. Please see the specification section for details. Following these guidelines will provide virtually distortion-free sound reproduction and long loudspeaker life.

TROUBLESHOOTING

The vast majority of new speaker "malfunctions" end up being traced to connections or switch settings. To avoid packing up correctly functioning speakers and sending them off, only to find that they're not really at fault, check the following tips first, before requesting service.

No sound at all or very faint sound from both speakers

1. Amp/receiver tape monitor button pushed in while using CD, FM or phono inputs.

2. Wrong speaker switch, "A" or "B" speaker output.

3. Sound source (CD, cassette deck, turntable) not turned on, not activated, not hooked up or not selected on amp/receiver front panel.

No sound from one speaker

1. Balance control turned all the way left or right.

2. Speaker wire has become disconnected.

3. One of the connections between sound source and amp/receiver is faulty or has become disconnected.

Both speakers play at low volumes but shut off as volume is increased OR sound turns on and off intermittently

A few strands of speaker wire may be shorting out. Recheck the connections. Recheck the impedance of the amp.

Bass is very weak AND/OR sound seems to come from each speaker separately, without creating a stable stereo image between the speakers.

1. The polarity (+ & -) of one speaker has been reversed relative to the other. Double check connections.
2. Speakers are too far away from back and side walls or too far apart. Experiment again with the speaker placement. If you are still encountering problems, consult your JBL dealer.

Additional Areas to Check When Using an AV Receiver:

No sound at all or very faint sound from the center channel or other speakers

1. Speaker wire has become disconnected.
2. One of the connections between sound source and AV receiver/amp is faulty or has become disconnected.
3. AV receiver/amp center channel mode not selected. Please select a mode that activates the center channel.
4. Rear/surround information may not be recorded in some scenes and passages.
5. AV receiver/amp "audio direct" switch is activated. This switch should be off to activate the 5 speaker surround mode.
6. Sound source (VDP, VCR, CD, cassette deck, turntable) not turned on, not activated, not hooked up or not selected on AV receiver/amp front panel.

GENERAL CARE

The grille is held in place by pins near the edges. To remove the grille, grasp it by both top and bottom edges and pull gently. To replace grille, re-position it carefully and press gently at the corners. Do not push on the center area of the grille.

NOTE: The M5 grille is non-removable. Do not attempt to pry the grille from the cabinet as this will void your warranty. The rear panels are removable to allow service personnel access to the driver components if needed.

The loudspeaker cabinet may be cleaned with a slightly damp cloth. To remove dust from the grille cloth, use a vacuum with a brush attachment. Spots may be removed with a commercial spot remover. Do not use any cleaners or solvents on the speaker drivers themselves.

SERVICE

Should your loudspeaker ever need service, return it to the JBL dealer from whom it was purchased. If for some reason this is impractical, in the United States, call 800-336-4JBL for your nearest warranty station. Military personnel who purchased from authorized military outlets should return them to a similar outlet or contact:

ALA Associates Enterprises
985 Ponce de Leon Avenue
Atlanta, GA 30306
Phone: 800-875-4252
Fax: 404-873-3592

If purchased outside the United States, contact your local distributor to make arrangements for repair service. **Do not return products to the JBL factory without prior authorization.**

Specifications	MR Center	M5	MR25	MR26
Application	Center Channel	Bookshelf	Bookshelf	Bookshelf
High Frequency Dome Transducer	10mm Ti Composite	2" Paper (Cone)	10mm Ti Composite	10mm Ti Composite
Midrange Transducer (Nitrile Polymer Fibre Cone)	n/a	n/a	n/a	n/a
Low Frequency Transducer (Nitrile Polymer Fibre Cone)	2 x 3.5" (Neo Magnet)	5"	5"	6½"
Crossover Frequency	4.5kHz	2.2kHz	4.5kHz	4.5kHz
Frequency Response (-6 dB)	80 Hz to 20 kHz	75 Hz to 20 kHz	70 Hz to 20 kHz	55 Hz to 20 kHz
Sensitivity (1 Watt/1 Meter)	87 dB	86 dB	87 dB	88 dB
Nominal Impedance	8 ohms	8 ohms	8 ohms	8 ohms
Recommended Amplifier Power*	10 to 80 Watts	10 to 50 Watts	10 to 75 Watts	10 to 100 Watts
External Dimensions				
Height	5⅝"	11"	12"	15"
Width	14¼"	6½"	7½"	8½"
Depth	6⅞"	7¼"	8½"	10"
External Dimensions				
Height	132 mm	280 mm	305 mm	381 mm
Width	362 mm	165 mm	190 mm	216 mm
Depth	168 mm	184 mm	216 mm	254 mm
Weight (each)	7 lbs 3.2 kg	7 lbs 3.2 kg	8 lbs 3.6 kg	12 lbs 5.5 kg
Shipping Weight	10 lbs 4.5 kg	18 lbs 8.2 kg	20 lbs 9.1 kg	28 lbs 12.7 kg

*The maximum recommended amplifier power rating will insure proper system headroom to allow for occasional program peaks. We do not recommend sustained operation at these maximum power Levels.

MR SERIES LOUDSPEAKERS

Specifications	MR28	MR38	MRV308	MRV310
Application	Bookshelf	Bookshelf	Tower	Tower
High Frequency 14mm" Ti Dome Transducer	14mm Ti Composite	14mm Ti Composite	14mm Ti Composite	14mm Ti Composite
Midrange Transducer (Nitrile Polymer Fibre Cone)	n/a	6½"	6½" (Shielded)	6½" (Shielded)
Low Frequency Transducer (Nitrile Polymer Fibre Cone)	8"	8"	8" (Shielded)	10" (Shielded)
Crossover Frequency	3.5kHz	3.5kHz	3.5kHz	3.5kHz
Frequency Response (-6 dB)	50 Hz to 20 kHz	45 Hz to 20 kHz	42 Hz to 20 kHz	40 Hz to 20 kHz
Sensitivity (1 Watt/1 Meter)	90 dB	92 dB	92 dB	92 dB
Nominal Impedance	8 ohms	8 ohms	8 ohms	8 ohms
Recommended Amplifier Power*	10 to 125 Watts	10 to 150 Watts	10 to 150 Watts	10 to 175 Watts
External Dimensions				
Height	19¼"	24"	32¾"	36"
Width	10"	10"	10"	11¼"
Depth	10"	12"	12"	12"
External Dimensions				
Height	489 mm	610 mm	818mm	915 mm
Width	254 mm	254 mm	254 mm	298 mm
Depth	254 mm	305 mm	305 mm	305 mm
Weight (each)	18 lbs 8.2 kg	25 lbs 11.3 kg	28 lbs 12.7 kg	32 lbs 14.5 kg
Shipping Weight	40 lbs 18.2 kg	29 lbs 13.2 kg	32 lbs 14.5 kg	36 lbs 16.4 kg

*The maximum recommended amplifier power rating will insure proper system headroom to allow for occasional program peaks. We do not recommend sustained operation at these maximum power levels.

JBL continually strives to improve its products. New materials, production methods and design refinements are introduced into existing models without notice as a routine expression of our design philosophy. For this reason, JBL MR Series Loudspeakers may differ in some respect from their published specifications and descriptions, but will always equal or exceed the original specifications unless otherwise stated.

JBL

80 Crossways Park West, Woodbury, NY 11797
8500 Balboa Blvd., Northridge, CA 91329

H A Harman International Company

Part No. 301986-001