

42.1i, 52.1i, 62.1i, 63.1i, 652.1i, 692.1i,
693.1i, 32.1cf, 462.1cf, 572.1cf

INSTRUCTIONS

 Infinity

KAPPASERIES

Thank you for purchasing Infinity's Kappa Series multi-element automotive loudspeakers. We've organized this manual to make your installation as simple and trouble-free as possible. Please read it thoroughly before proceeding. Remember to keep your sales receipt with this manual in a safe place so both are available for future reference.



IMPORTANT: Installation of automotive stereo components can require extensive experience with a variety of mechanical and electrical procedures. Although these instructions explain how to install Kappa Series speakers in a general sense, they do not show the exact installation method for your particular vehicle. If you do not feel you have the experience, do not attempt the installation yourself, but instead ask your Authorized Infinity Car Audio Dealer about professional installation options.



WARNING: Playing loud music in an automotive environment can permanently damage your hearing, as well as hinder your ability to hear traffic. The maximum volume levels achievable with Infinity speakers, combined with high power amplification, may exceed safe levels for extended listening. We recommend using low volume levels when driving. Infinity accepts no liability for hearing loss, bodily injury or property damage as a result of use or misuse of this product.

SPEAKER PLACEMENT

Kappa speakers are designed to be easily installed in stock speaker locations. While mounting your speakers in the original factory locations will, in most cases, provide excellent sonic results, the best sounding installations are a result of adherence to a few basic rules.

- For the most spacious stereo image, place the left and right speakers as far apart as possible.
- For enhanced center image, place the left and right speakers so they are equidistant from the listening position. If possible, try to place them as far forward as possible.
- For best treble response, aim each speaker so that its sound waves will converge at the listener's ears. This will take advantage of the tweeter's directional nature and provide the best on-axis high-frequency response.
- For models with UniPivot™ tweeters (52.1i, 62.1i, 652.1i, 692.1i and 572.1cf) aim the tweeter at the listening position by rotating it up to 355 degrees.

INSTALLATION

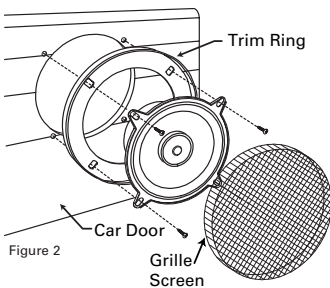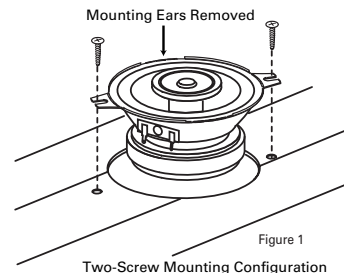

Typical installation of the Kappa i Series speakers with grilles as shown in Figure 2.

NOTE: The cf Series is designed for direct replacement of factory speakers. Therefore they do not contain the grilles and trim shown in Figure 2. Installation of these models simply entails reversing the steps taken to remove the original speakers.

INSTALLATION WARNINGS AND TIPS

- Always wear protective eyewear when using any tools.
- Turn off all audio systems and other electrical devices before you start. Disconnect the (-) negative lead from your vehicle's battery.
- Keep speakers in their package until final installation. When moving a speaker, always rest it with the cone or dome facing up. Never use force to install any speaker.
- Check clearances on both sides of a planned mounting surface before drilling any holes or installing any screws. Remember that the screws can extend behind the surface.
- At the installation sites, locate and make a note of all fuel lines, hydraulic brake lines, vacuum lines and electrical wiring. Use extreme caution when cutting or drilling in and around these areas.

CAUTION: In some cars, fuel tanks may be located directly beneath the rear deck. Check for adequate speaker basket clearance before considering this location!

- Before drilling or cutting holes, use a utility knife to remove unwanted fabric or vinyl, to keep material from snagging in a drill bit or saw.
- For door installations, check the clearance with the windows throughout the range of the window's travel, and verify that a mounted speaker will not interfere with the window crank or power window mechanism.
- If mounting speakers elsewhere, check for clearance around rear deck torsion bars, glove box or other structural elements.
- Do not mount speakers where they will get wet.

A NOTE ON POWER HANDLING

Kappa speakers are designed to produce reasonable volume levels with little amplifier power. However, the addition of an amplifier to drive your speakers and a subwoofer will enhance the dynamic range of your system, and help overcome the ambient noise in a moving vehicle. Kappa speakers are designed to handle the power of a dedicated amplifier driven at or below its rated power. If an amplifier is driven far above its rated power, the output signal will “clip,” and the additional power present in a clipped signal can damage any speaker. Distorted or “fuzzy” sound from your speakers is an indication that the amplifier has exceeded its rated power, and you should reduce the volume level.

GENERAL CARE

The loudspeaker grilles may be cleaned with a slightly damp cloth. Do not use any cleaners or solvents on the grilles or the speaker cones.

SPECIFICATIONS: KAPPA STANDARD SERIES

42.1i

Type: 4" 2-Way
 Speaker Impedance: 4 ohms
 Power Handling: 45W
 Frequency Response: 80Hz ~ 20kHz
 Sensitivity: 89Hz @ 2.83 V, 1 watt
 Mounting Depth, Drop-in: 1-3/4" (45 mm)
 Cut-out Diameter: 3-3/4" (96 mm)

52.1i

Type: 5-1/4" 2-Way
 Speaker Impedance: 4 ohms
 Power Handling: 50W
 Frequency Response: 59Hz ~ 20kHz
 Sensitivity: 89Hz @ 2.83 V, 1 watt
 Mounting Depth, Drop-in: 2-7/16" (62 mm)
 Cut-out Diameter: 4-13/16" (123 mm)

62.1i

Type: 6-1/2" 2-Way
 Speaker Impedance: 4 ohms
 Power Handling: 70W
 Frequency Response: 50Hz ~ 20kHz
 Sensitivity: 89Hz @ 2.83 V, 1 watt
 Mounting Depth, Drop-in: 2-7/16" (62 mm)
 Cut-out Diameter: 5-1/8" (131 mm)

63.1i

Type: 6-1/2" 3-Way
 Speaker Impedance: 4 ohms
 Power Handling: 70W
 Frequency Response: 50Hz ~ 21kHz
 Sensitivity: 89Hz @ 2.83 V, 1 watt
 Mounting Depth, Drop-in: 2-7/16" (62 mm)
 Cut-out Diameter: 5-1/8" (131 mm)

652.1i

Type: 165 mm 2-Way
 Speaker Impedance: 4 ohms
 Power Handling: 70W
 Frequency Response: 50Hz ~ 20kHz
 Sensitivity: 89Hz @ 2.83 V, 1 watt
 Mounting Depth, Drop-in: 2-9/16" (66 mm)
 Cut-out Diameter: 5-11/16" (145 mm)

692.1i

Type: 6" x 9" 2-Way
 Speaker Impedance: 4 ohms
 Power Handling: 100W
 Frequency Response: 38Hz ~ 20kHz
 Sensitivity: 89Hz @ 2.83 V, 1 watt
 Mounting Depth, Drop-in: 2-3/4" (70 mm)
 Cut-out Diameter: 5-11/16" x 8-3/4" (145 mm x 223 mm)

693.1i

Type: 6" x 9" 3-Way
 Speaker Impedance: 4 ohms
 Power Handling: 100W
 Frequency Response: 38Hz ~ 21kHz
 Sensitivity: 89Hz @ 2.83 V
 Mounting Depth, Drop-in: 2-3/4" (70 mm)
 Cut-out Diameter: 5-11/16" x 8-3/4" (145 mm x 223 mm)

SPECIFICATIONS: KAPPA CUSTOM-FIT SERIES

32.1cf


Type: 3-1/2" 2-Way
Speaker Impedance: 4 ohms
Power Handling: 30W
Frequency Response: 95Hz ~ 20kHz
Sensitivity: 89Hz @ 2.83 V, 1 watt
Mounting Depth, Drop-in: 1-7/16" (37 mm)
Cut-out Diameter: 3-1/4" (83 mm)

462.1cf

Type: 4" x 6" 2-Way Plate
Speaker Impedance: 4 ohms
Power Handling: 60W
Frequency Response: 78Hz ~ 20kHz
Sensitivity: 89Hz @ 2.83 V, 1 watt
Mounting Depth, Drop-in: 1-13/16" (47 mm)
Cut-out Diameter: 4-1/8" x 6-3/16"
(105 mm x 158 mm)

572.1cf

Type: 5" x 7" 2-Way
Speaker Impedance: 4 ohms
Power Handling: 70W
Frequency Response: 50Hz ~ 20kHz
Sensitivity: 89Hz @ 2.83 V
Mounting Depth, Drop-in: 2-3/8" (61 mm)
Cut-out Diameter: 5" x 7-3/16"
(127 mm x 183 mm)

 Infinity Systems, Inc. • 250 Crossways Park Drive,
Woodbury, NY 11797 USA • (516) 496-3400 • FAX (516) 682-3583

DECLARATION OF CONFORMITY



We, Infinity Systems AS
Kongevejen 194B
DK-3460 Birkerød
DENMARK

declare in own responsibility, that the products described in this owner's manual are in compliance with technical standards:
EN 50 081-1/1992
EN 50 082-1/3.1995

Steen Michaelsen
Infinity Systems AS
Birkerød, DENMARK, 298