


Thank you for purchasing a Harman Kardon® AVR 240. This Quick-Start Guide will help you with a basic system installation. For detailed information on any step in this Guide, please refer to the pages referenced in the Owner's Manual. We strongly recommend that you read the Owner's Manual for complete details on how to install, configure and operate the AVR 240, as well as for the important safety information it contains.

Figure 1 – Speaker Placement

The colors shown for each speaker correspond to the matching output terminal connection on the back of the AVR 240 (see page 8).

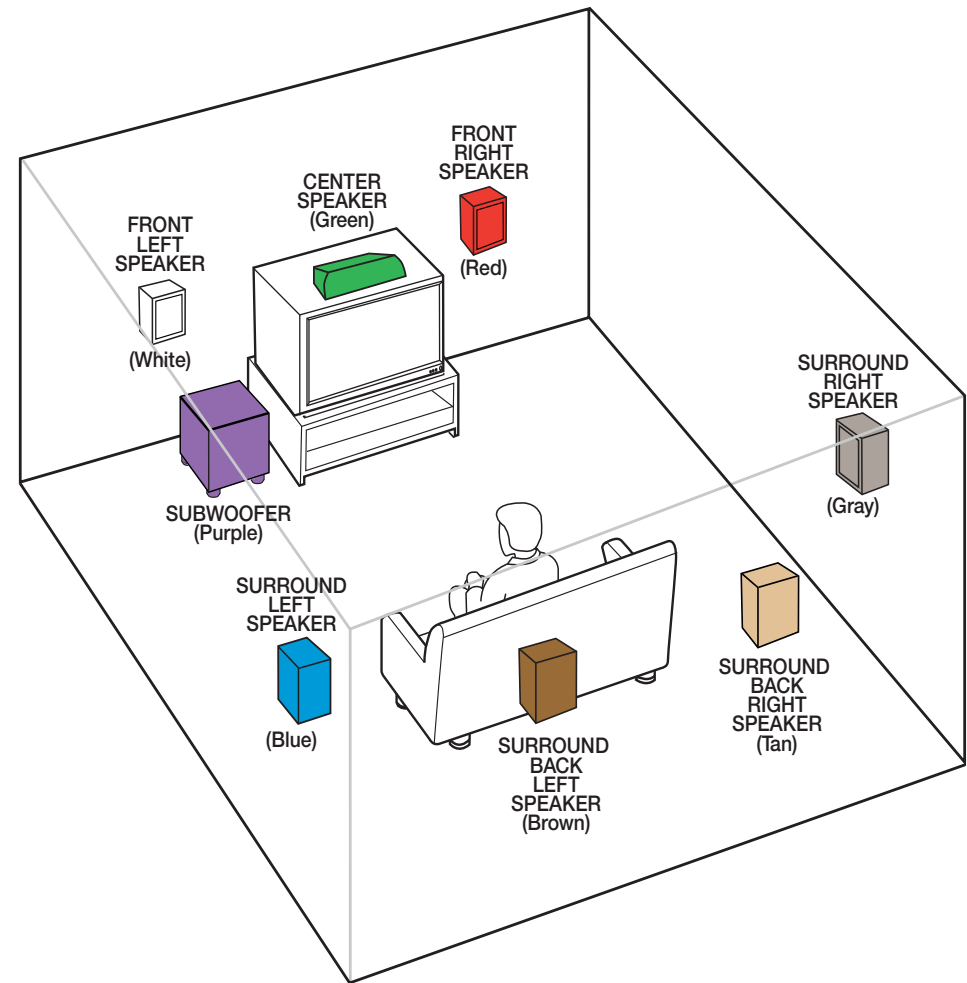

Step 1. Place your speakers in the listening room (see pages 18–20).

Connections Color Guide		
Audio Connections	Left	Right
Front	White	Red
Center	Green	
Surround	Blue	Gray
Subwoofer	Purple	
Surround Back	Brown	Tan
Digital Audio Connections		
Coaxial	Orange	
Optical		Optical icon
Video Connections		
Composite	Yellow	
S-Video		S-Video icon

Match the colored jacks on the AVR 240 to the appropriate jacks on your source equipment or speakers. The colors are standardized, but not all equipment or connectors use them.

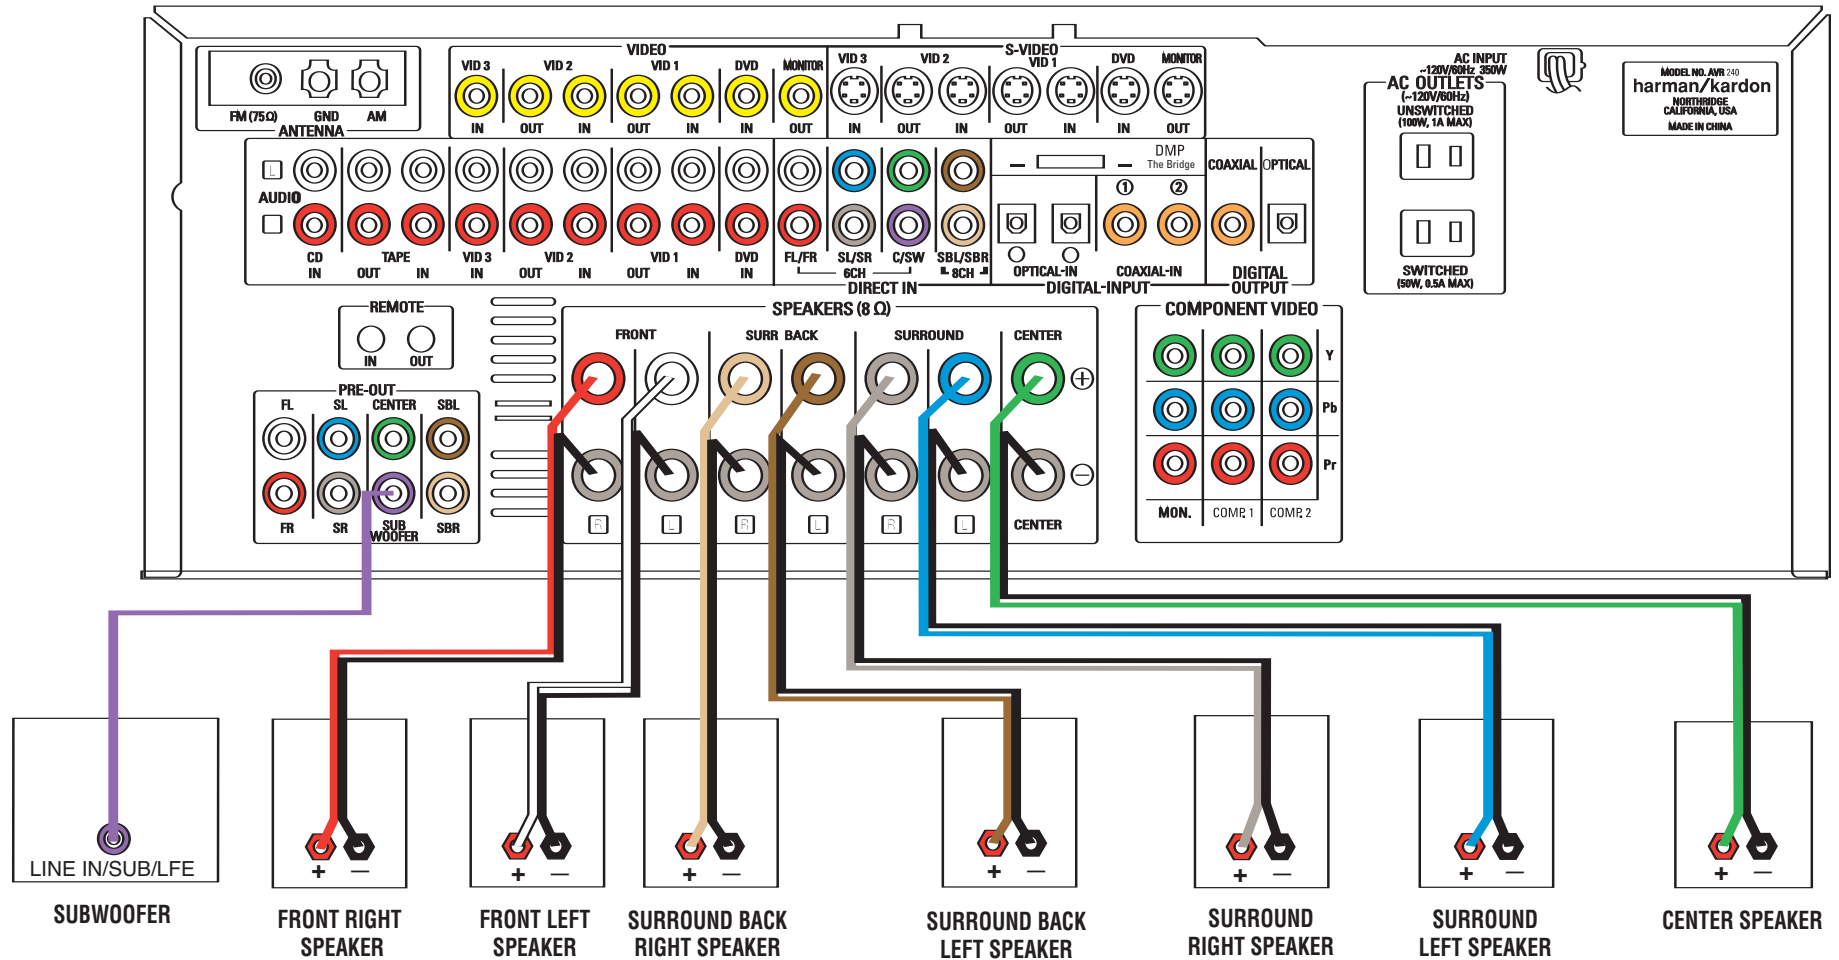


Figure 2 – Speaker Connections

Step 2. Connect the speakers to the receiver: red (+) on speaker to colored (+) on receiver, and black (-) to black (-) (see page 15).

Step 3. Connect the Subwoofer Pre-Out jack to the Line-In jack on your subwoofer (see page 15). You may adjust the settings on the subwoofer later as needed.

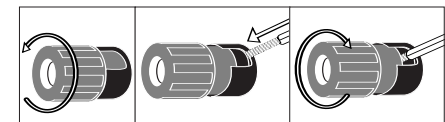


Figure 3 – How to Use the Binding-Post Speaker Terminal


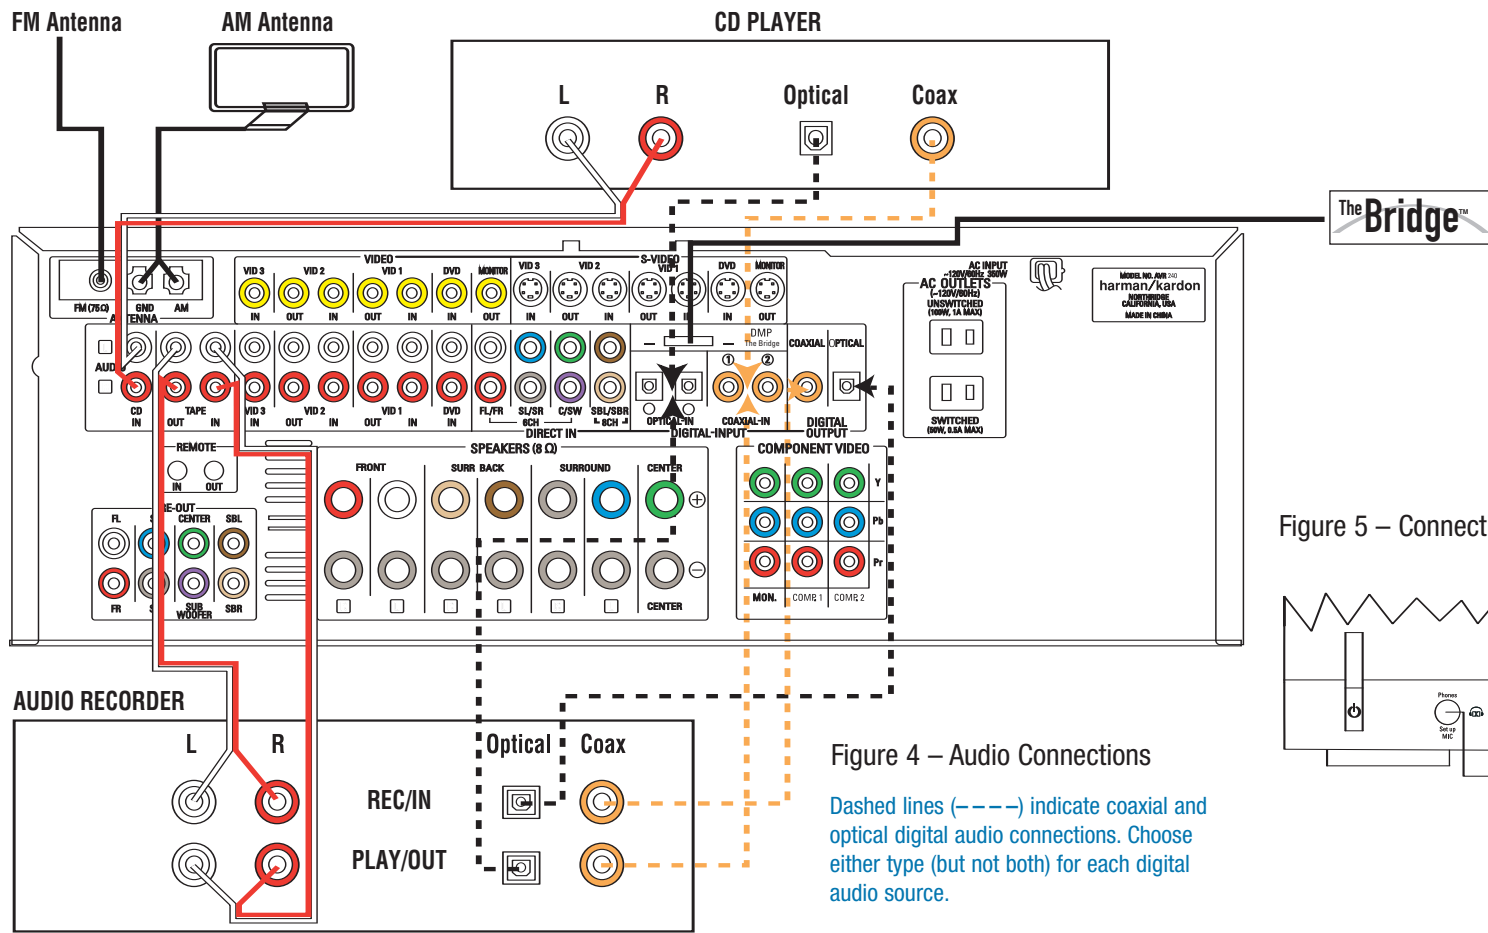


Figure 4 – Audio Connections

Dashed lines (----) indicate coaxial and optical digital audio connections. Choose either type (but not both) for each digital audio source.

Figure 5 – Connecting EzSet+ Microphone

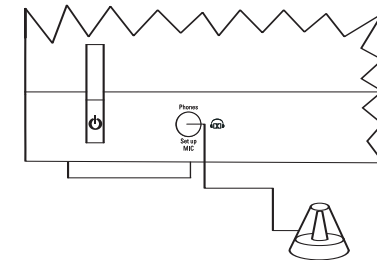

Step 4. Connect AM and FM antennas as shown above (see page 15).

Step 5. Connect source components, as shown in Figures 4 and 6 and the Device Connection Options chart on the back of this Guide (see pages 15–16).

AUDIO connections: Right channel (red) on source to right (red) on AVR, and left channel (white) on source to left (white) on AVR.

DIGITAL AUDIO connections, if available: Choose either coax (orange) to coax (orange) OR optical to optical for each device. The Coax 1 input defaults to the DVD player, and the Optical 1 input defaults to Video 2 (Cable/Sat), but either may be reassigned. Assign the other digital inputs and outputs as appropriate for your equipment (see Step 7).

VIDEO connections: Choose component (Y/Pb/Pr – green/blue/red), composite (yellow) or S-video (4-pin) for each video source. Connect the Composite and S-Video Monitor outputs to your video monitor (TV). The Component Video 1 input defaults to any of the DVD, Tuner, CD or Tape sources. The Component Video 2 input

defaults to any of the Video 1, 2, 3 or 4 sources, or the 6-/8-channel direct inputs. However, either component video input may be reassigned using the Input Setup menu. Switch your TV set's input to match the type of video used for the currently selected source.

The Bridge: Make sure the AVR 240 is turned off, then connect the optional The Bridge to the DMP connector. Dock your compatible iPod® (not included) in The Bridge.

Step 6. Plug all components into AC power outlets. The outlets on the back of the AVR 240 should be used *only* for low-current products, such as CD or DVD players, and the total should not exceed 100 watts.

Basic Receiver Configuration

Step 7. **Select digital inputs:** If your DVD is connected to Coax 1, and your cable or satellite TV box (Video 2 source) is connected to Optical 1, no adjustment is needed. For any other digital-device connections, use the On-Screen Input Setup menu, or the front-panel Digital Select and arrow buttons to select digital input (see pages 21, 36).

Step 8. **Select a surround mode:** Press the Surround Mode button on the front panel to select Dolby® Pro Logic® II – Movie. (You may select other modes later as you become familiar with the AVR 240; see pages 22–24 and 33–39.)

Step 9. **Use EzSet+™ to configure and optimize your system:** Plug the EzSet+ microphone into the front-panel Headphones Jack (Figure 5). Place the microphone at the center of the room, or at your normal listening position. If desired, the microphone may be attached to a standard camera tripod using the threads on the bottom of the microphone. Activate EzSet+ using the on-screen menu system (see pages 24–26). As EzSet+ senses the output of each speaker, you will hear loud test signals. When the on-screen menu indicates that setup is complete, your system is adjusted for output levels, delay times and speaker settings. Unplug the microphone and store it for future use.

Step 10. Your system is configured – sit back and enjoy!

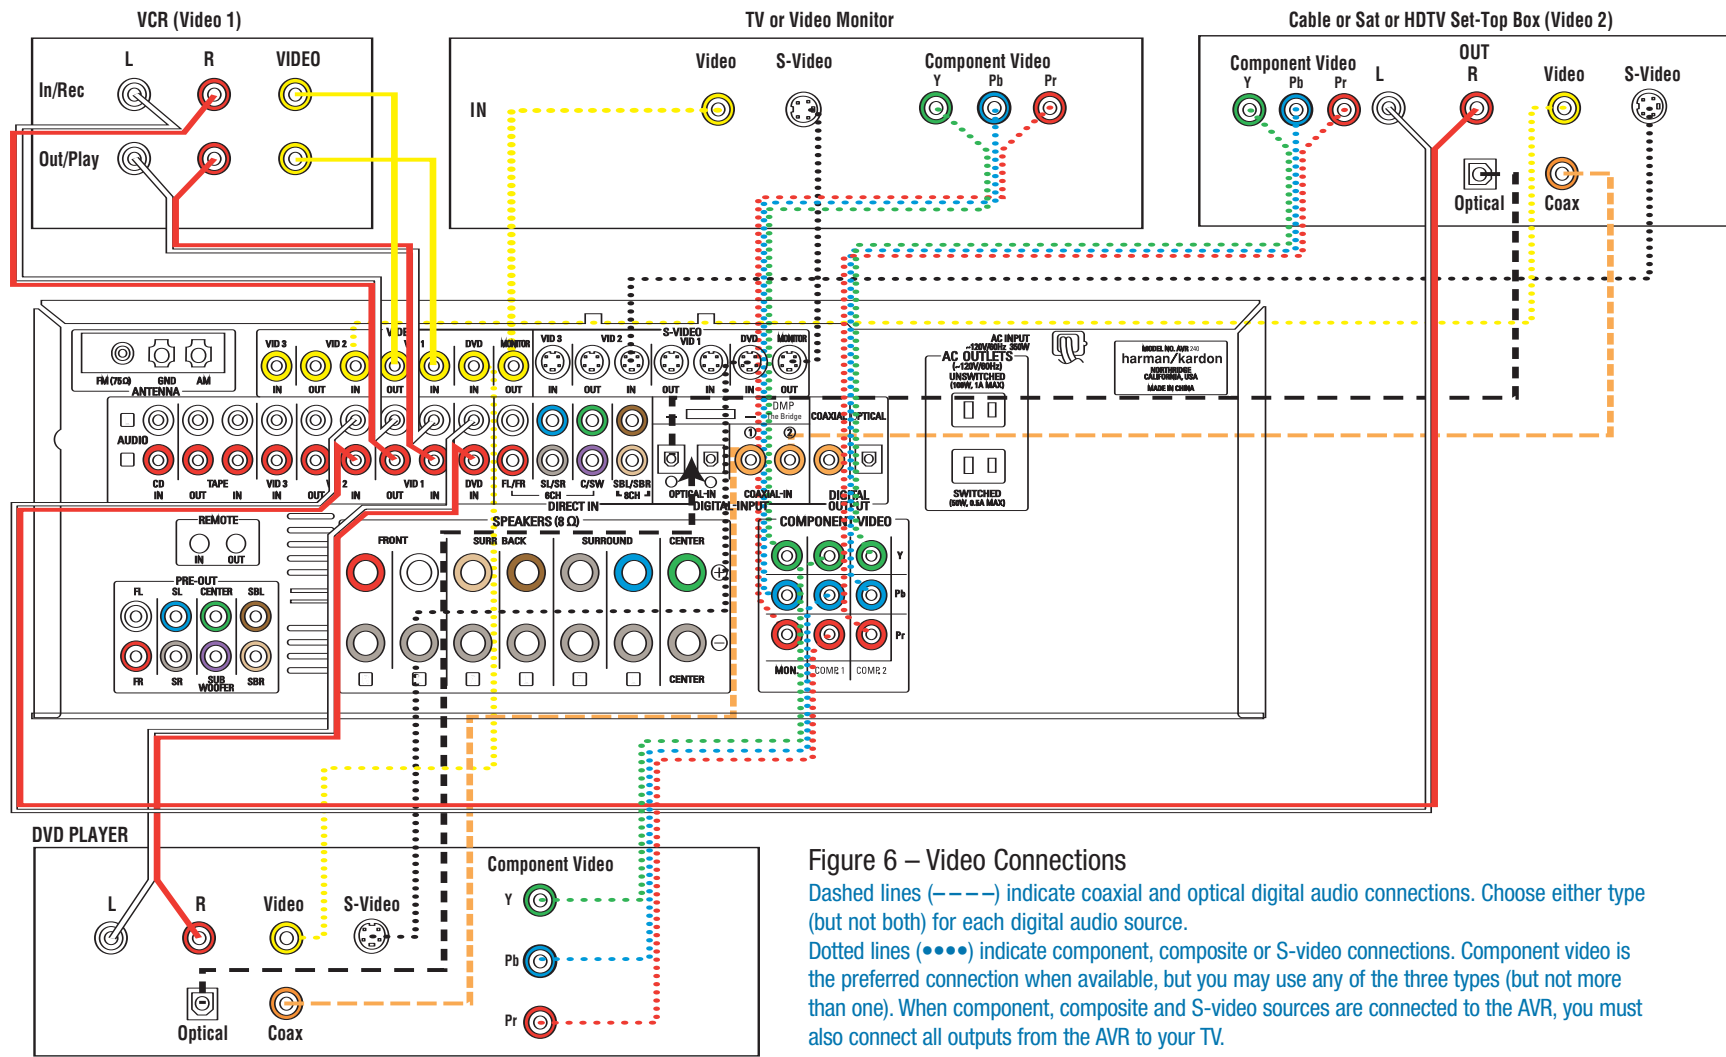


Figure 6 – Video Connections

Dashed lines (----) indicate coaxial and optical digital audio connections. Choose either type (but not both) for each digital audio source.
 Dotted lines (••••) indicate component, composite or S-video connections. Component video is the preferred connection when available, but you may use any of the three types (but not more than one). When component, composite and S-video sources are connected to the AVR, you must also connect all outputs from the AVR to your TV.

Device Connection Options: Recommended connections are shown in red, but connections may be made to best fit your system requirements. The Coaxial 3, Optical 3 and Video 4 inputs are on the front panel of the receiver.				
Device	Input Name	Audio Input Connections	Audio Output Connections	Video Connections
CD Player	CD	CD L/R Inputs, Optical Digital 1 or 2, or Coaxial Digital 1 or 2	Not required	Not required
DVD Player	DVD	Coaxial Digital 1 or 2, Optical Digital 1 or 2, or DVD L/R Inputs	Not required	Component Video 1 or DVD Composite or S-Video
VCR	Video 1	Video 1 L/R Inputs	Video 1 L/R Outputs	Video 1 Composite or S-Video Input and Output
Cable Box or Satellite Receiver	Video 2	Video 2 L/R Inputs, Optical Digital 1 or 2, or Coaxial Digital 1 or 2 Inputs*	Not required	Component Video 2 or Video 2 Composite or S-Video Input
The Bridge	The Bridge DMP	The Bridge DMP Connector	Not required	Not required
Audio Recorder	Tape	Tape L/R Inputs, Optical Digital 1/2** or Coaxial Digital 1/2** Inputs	Tape L/R Outputs, Digital Optical** or Coaxial Outputs**	Not required
TV or Projector	Not applicable	Not required	Not required	Monitor-Out Component, Composite and/or S-Video

* Check with your cable company to determine whether digital audio is available for all channels. It may be necessary to make BOTH analog and digital connections if it is not. ** Digital audio recorders only.